


 = 200mm

Tourneo Connect Kombi Bus LWB

burrows[®]

3_V408_M_L_32519



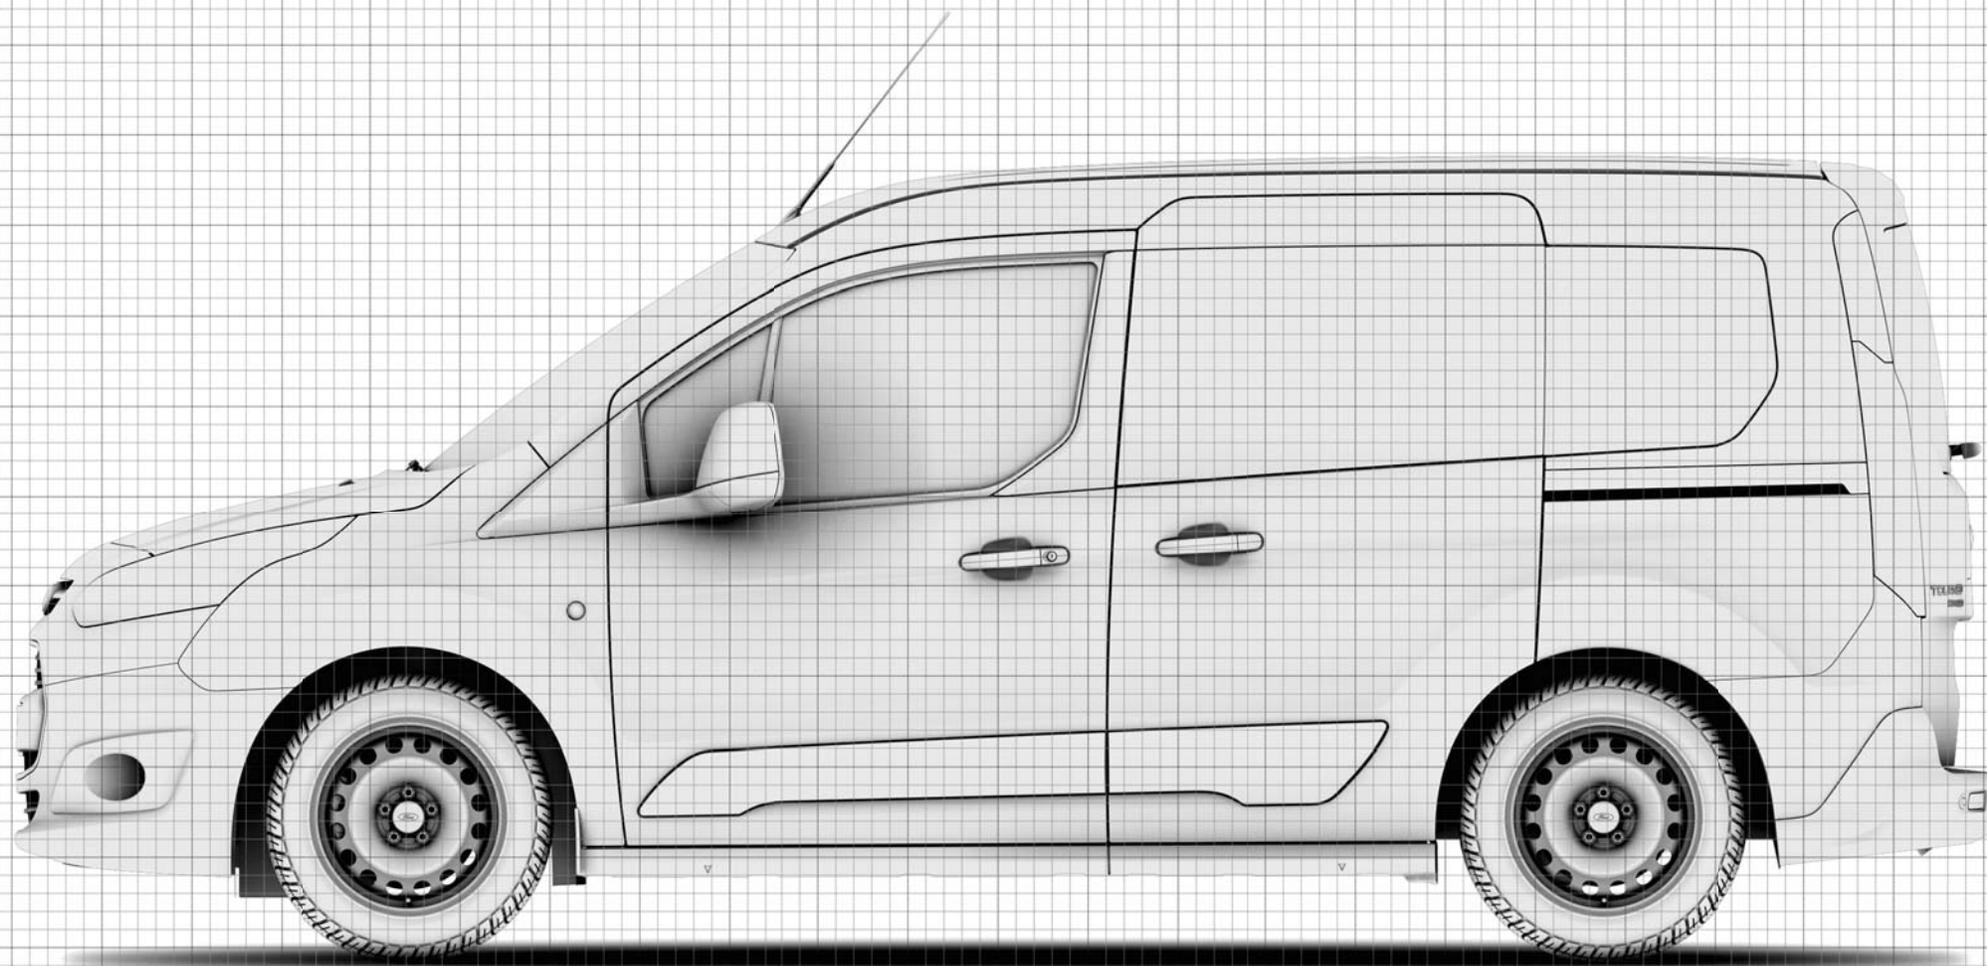



 = 200mm

Tourneo Connect Kombi Bus SWB



burrows[®]

3_V408_M_L_32513




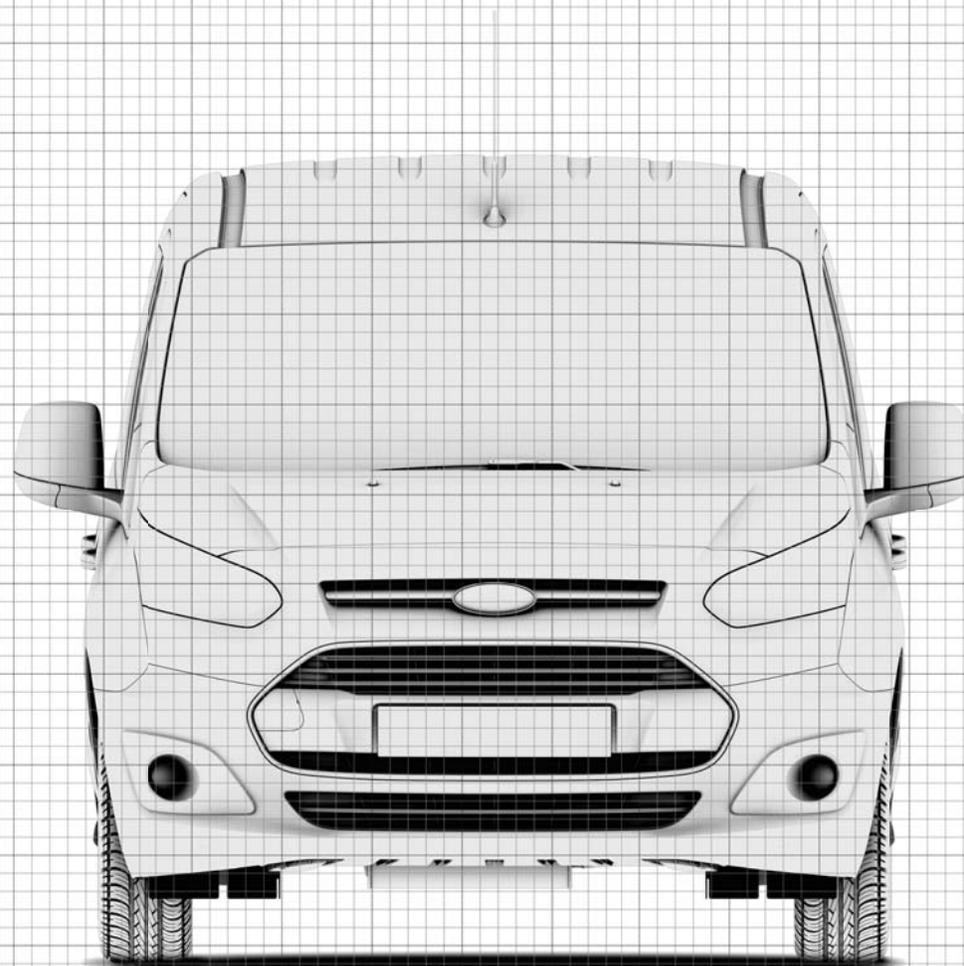

Tourneo Connect Kombi Bus LWB

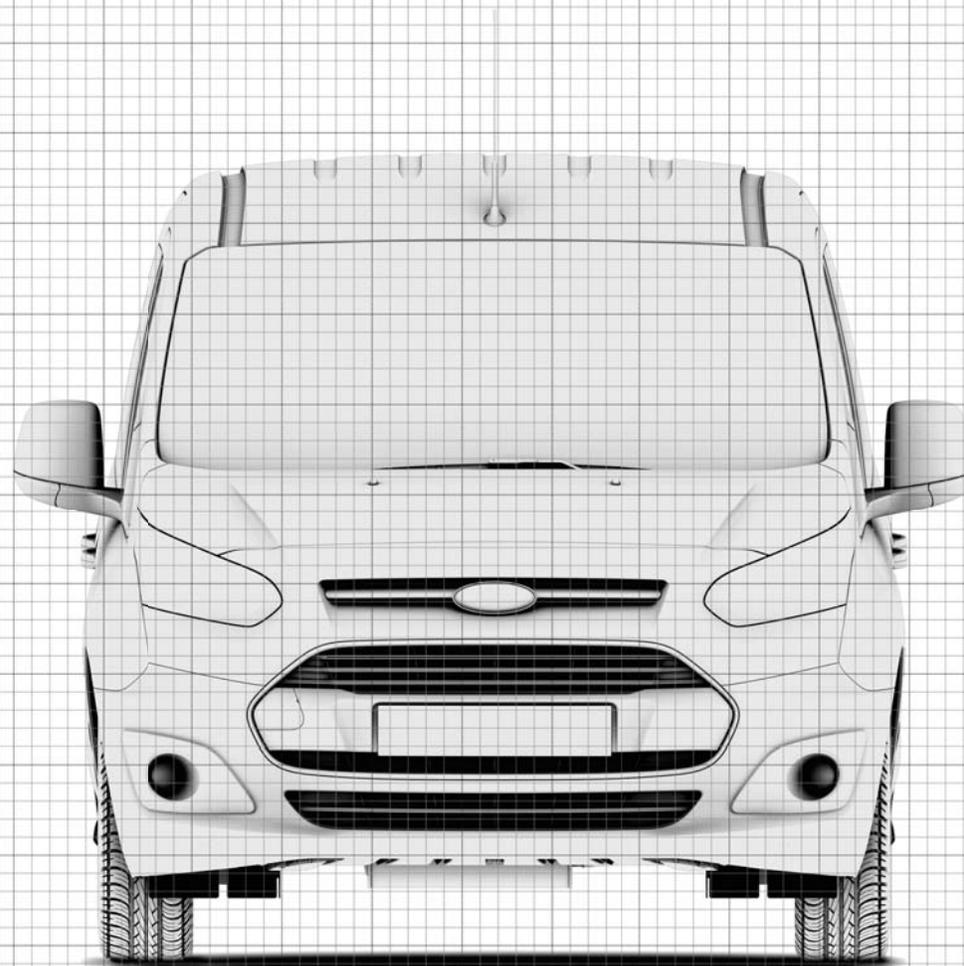


Tourneo Connect Kombi Bus SWB

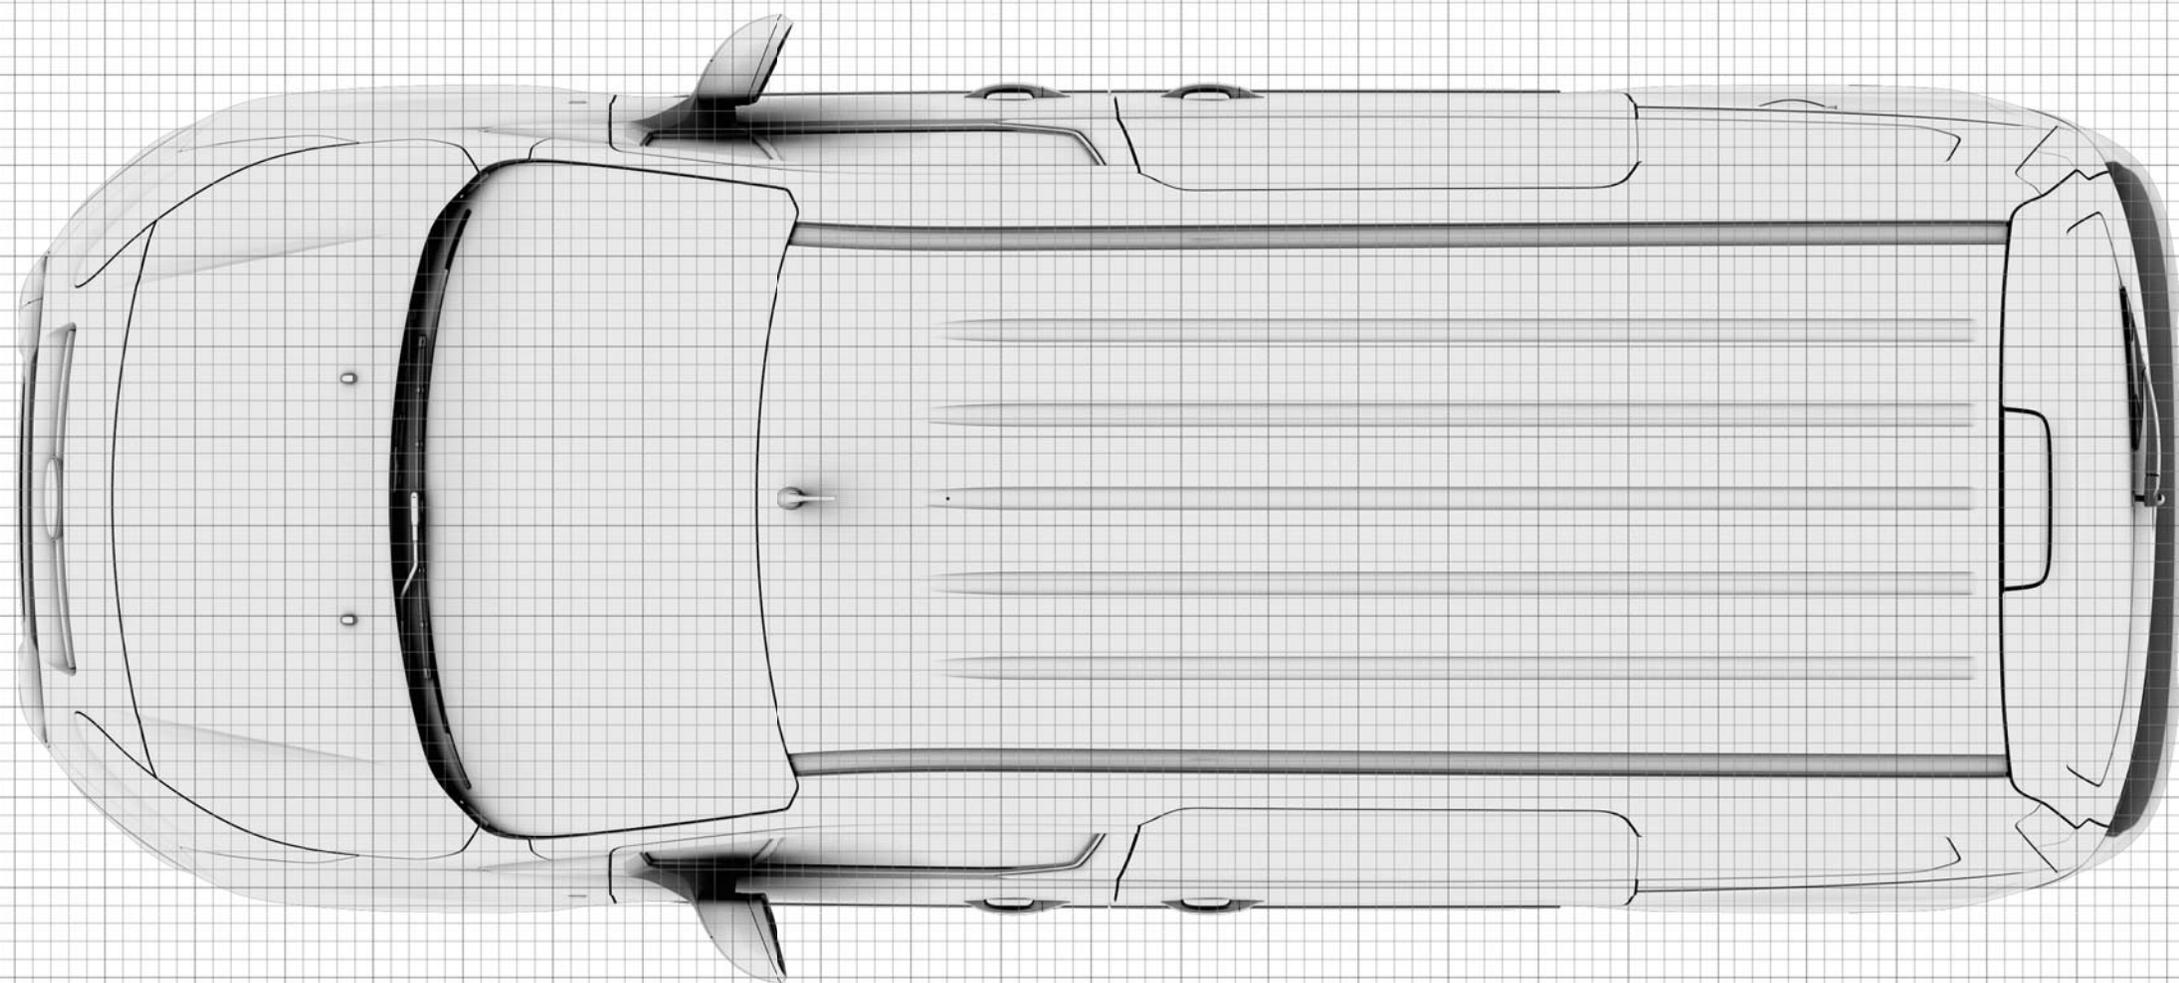

 = 200mm

Tourneo Connect Kombi Bus LWB

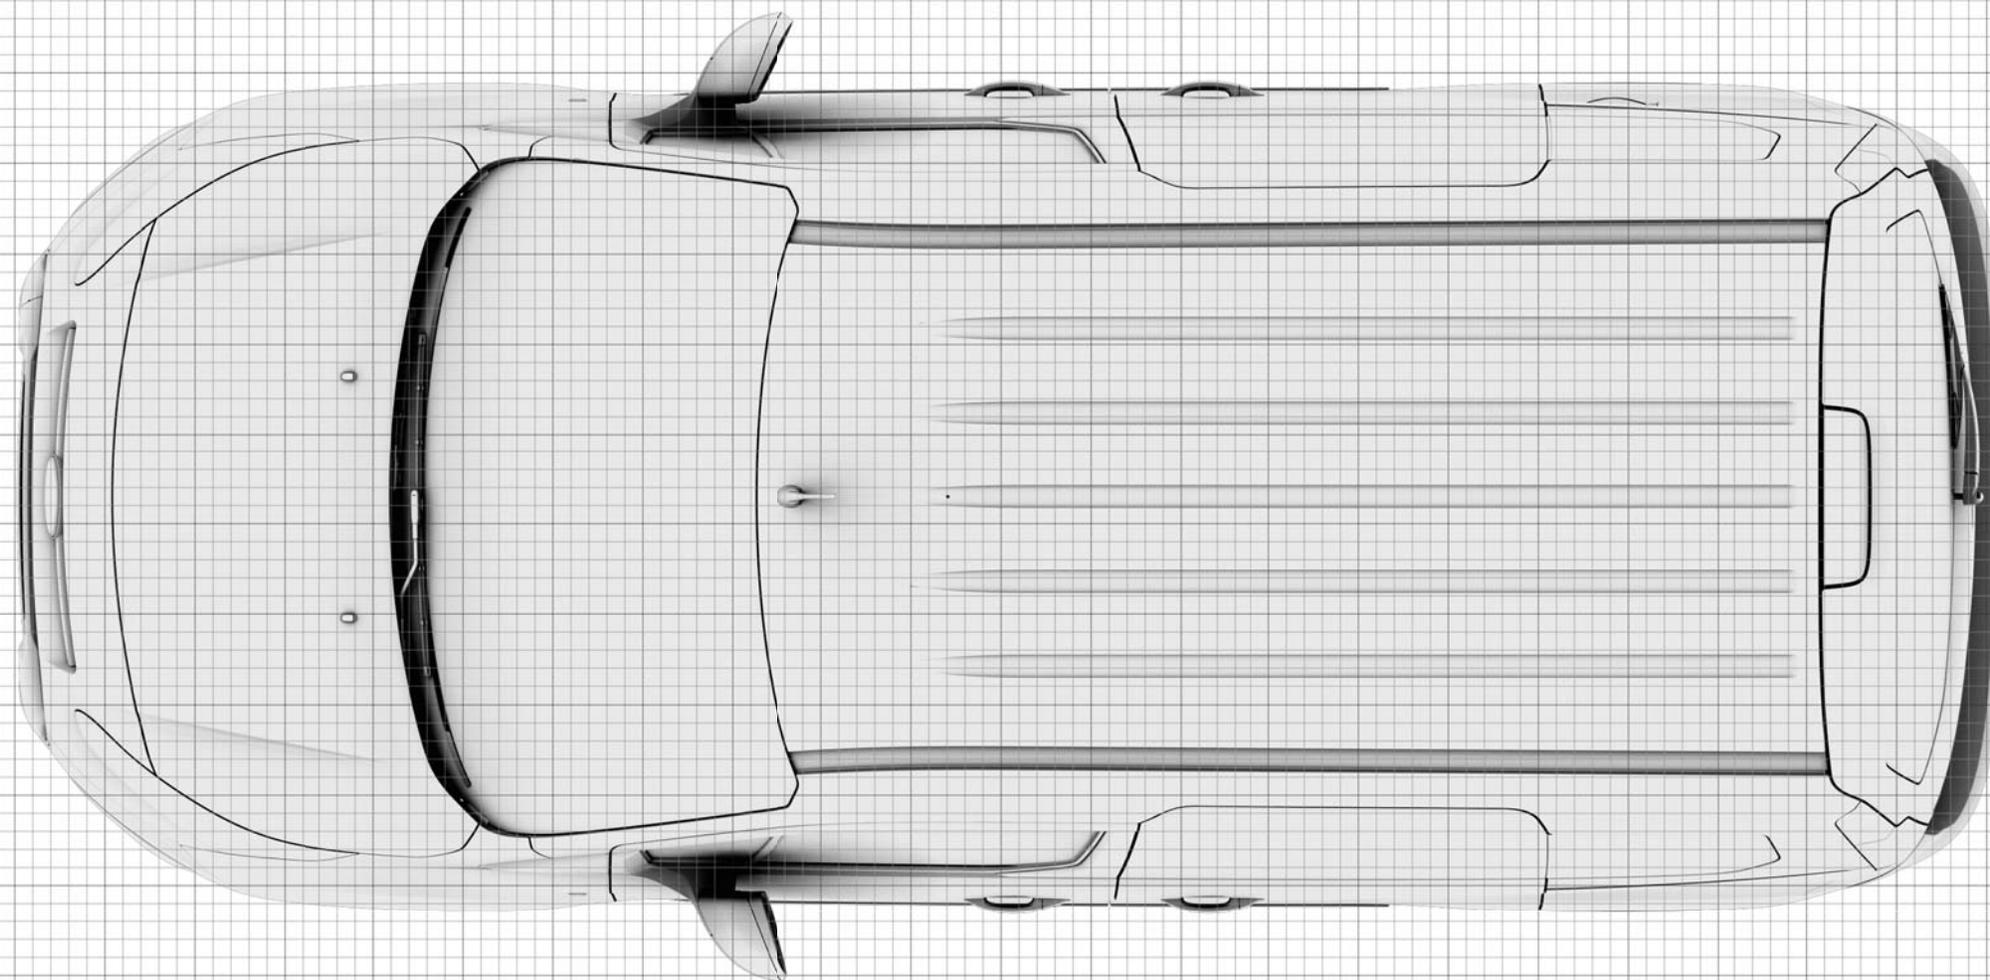


 = 200mm

Tourneo Connect Kombi Bus SWB

burrows[®]

3_V408_M_L_32510



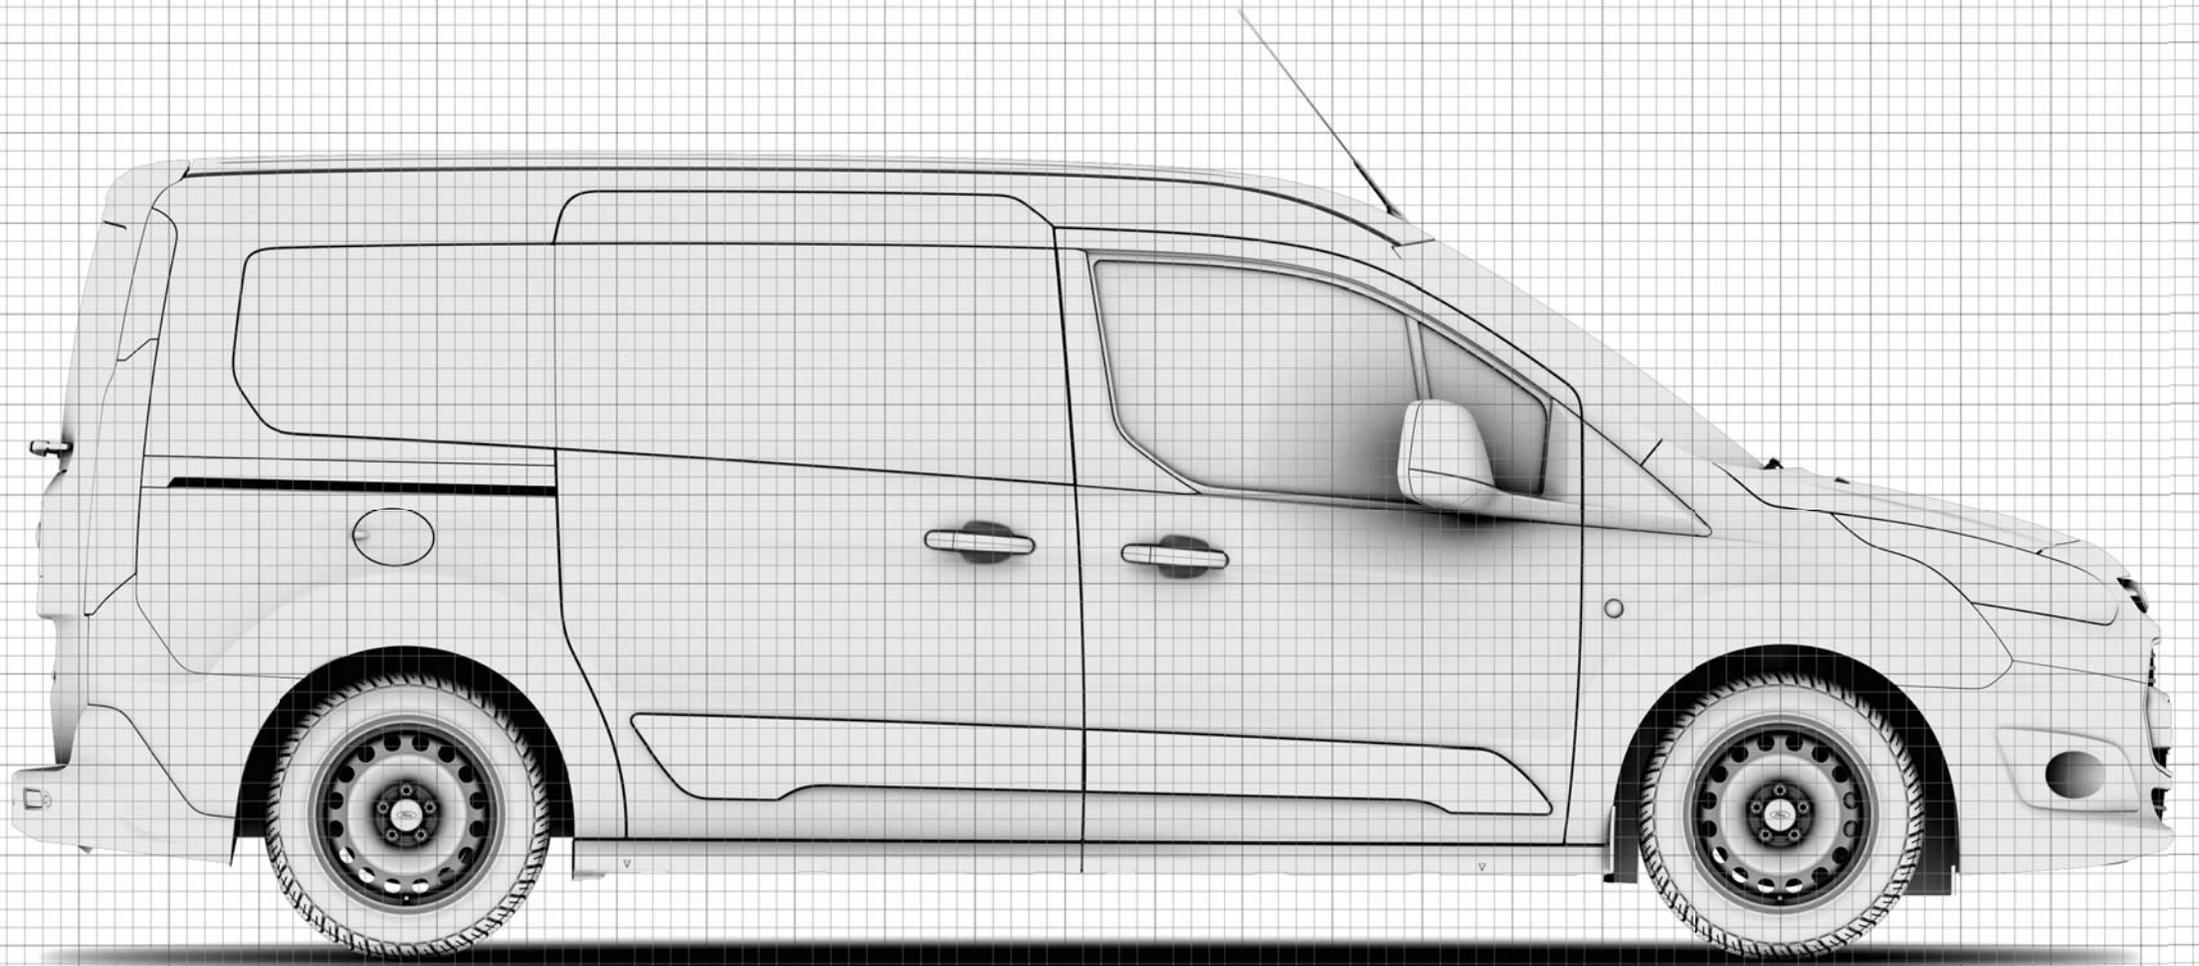


 = 200mm

Tourneo Connect Kombi Bus LWB

burrows[®]



3_V408_M_L_32518




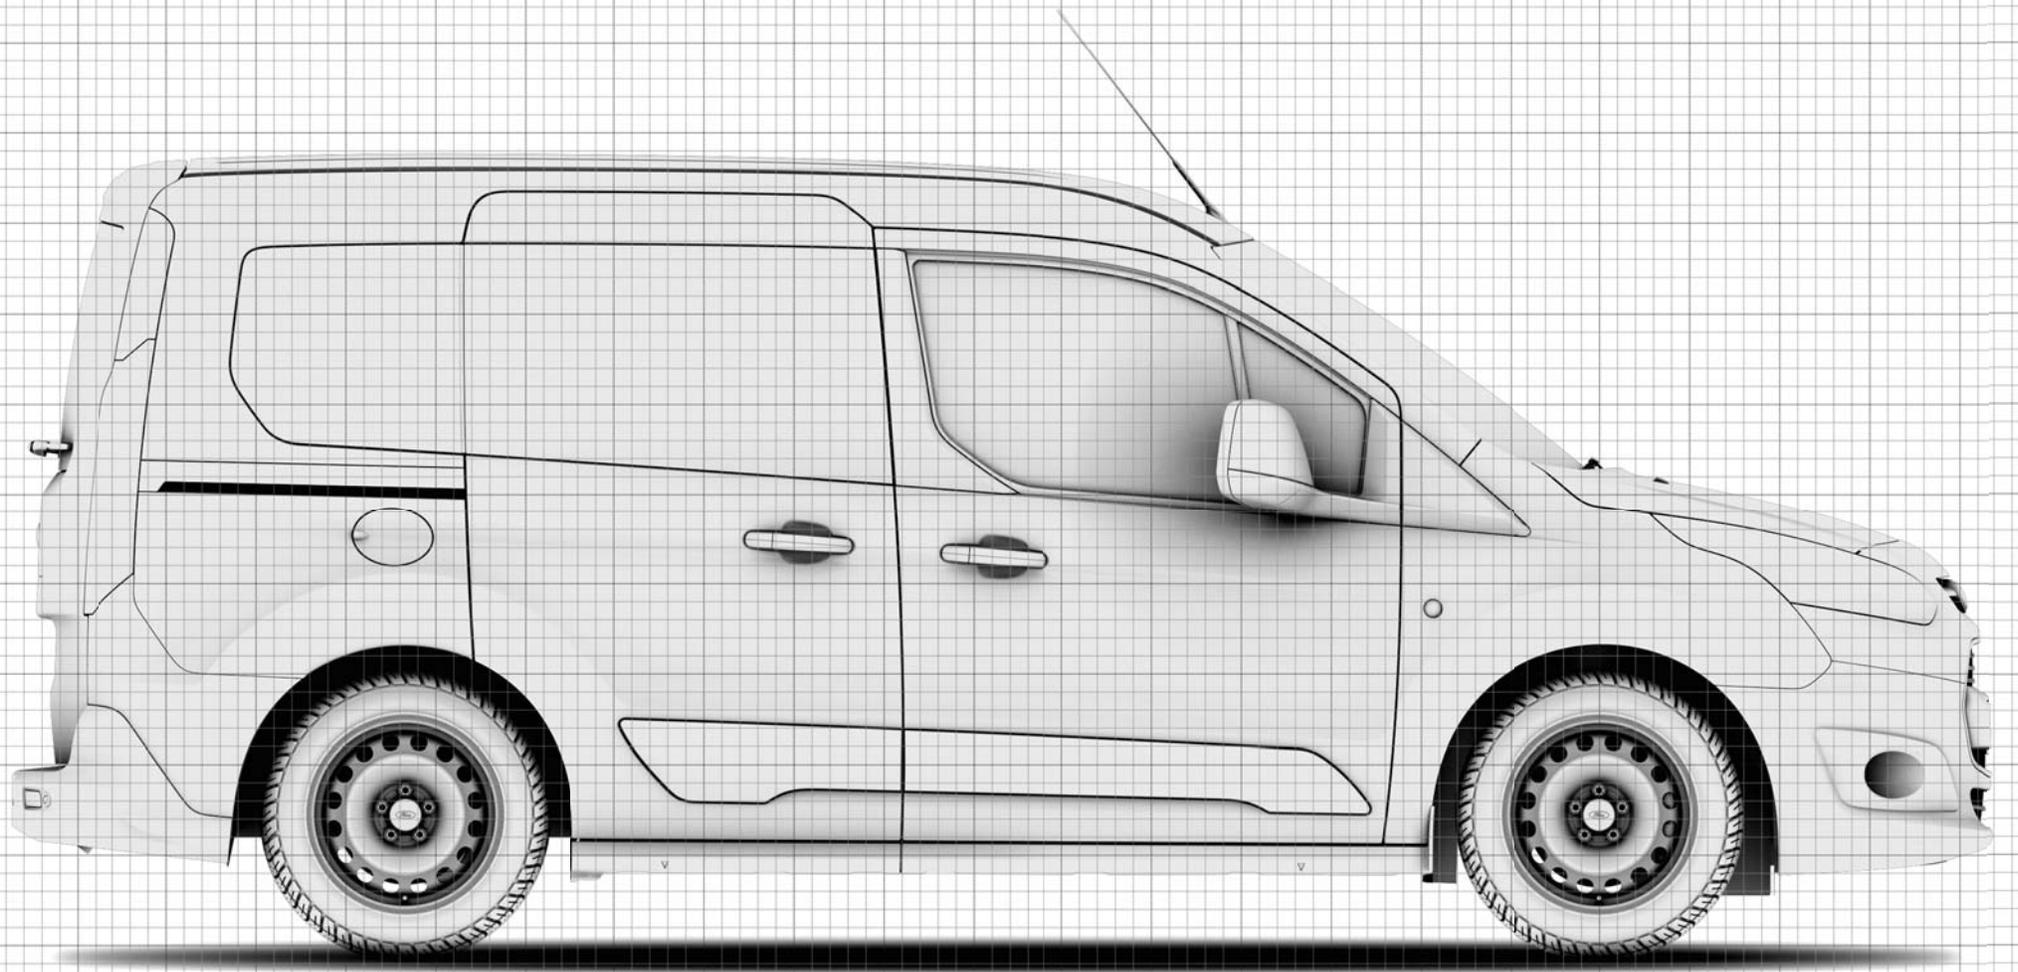


 = 200mm

Tourneo Connect Kombi Bus SWB

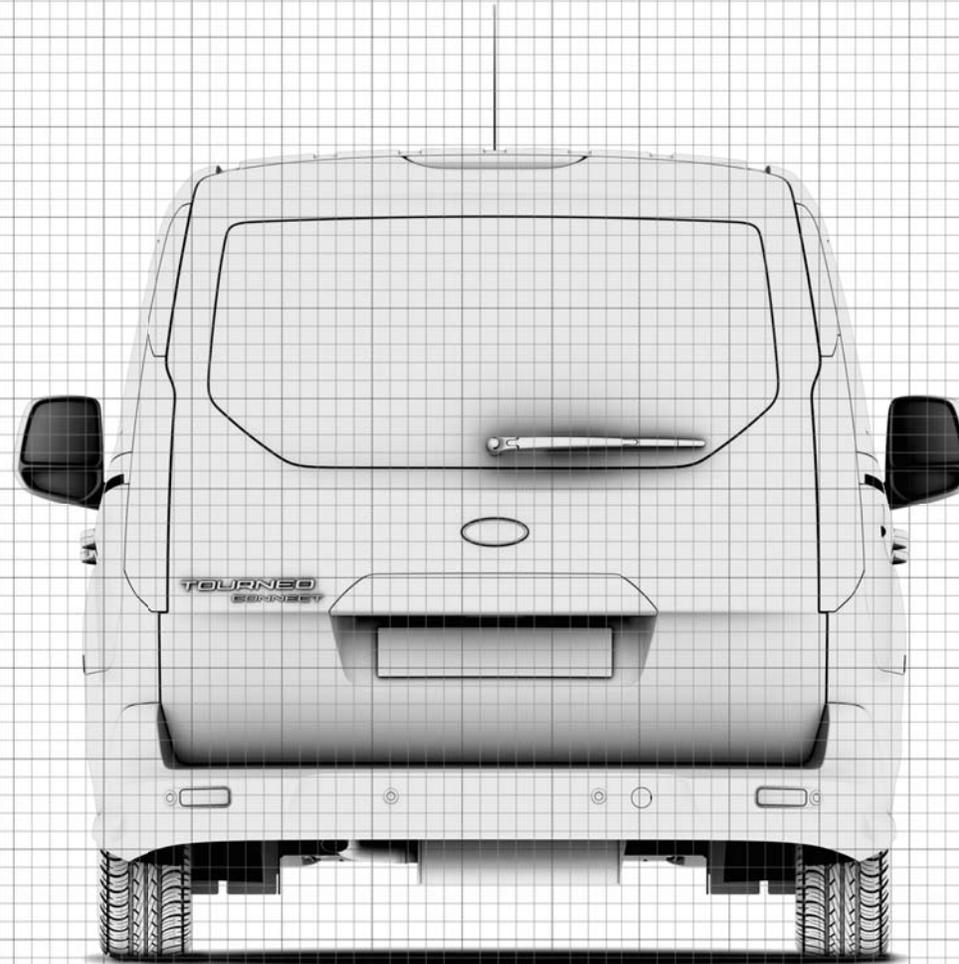

Tourneo Connect Kombi Bus LWB

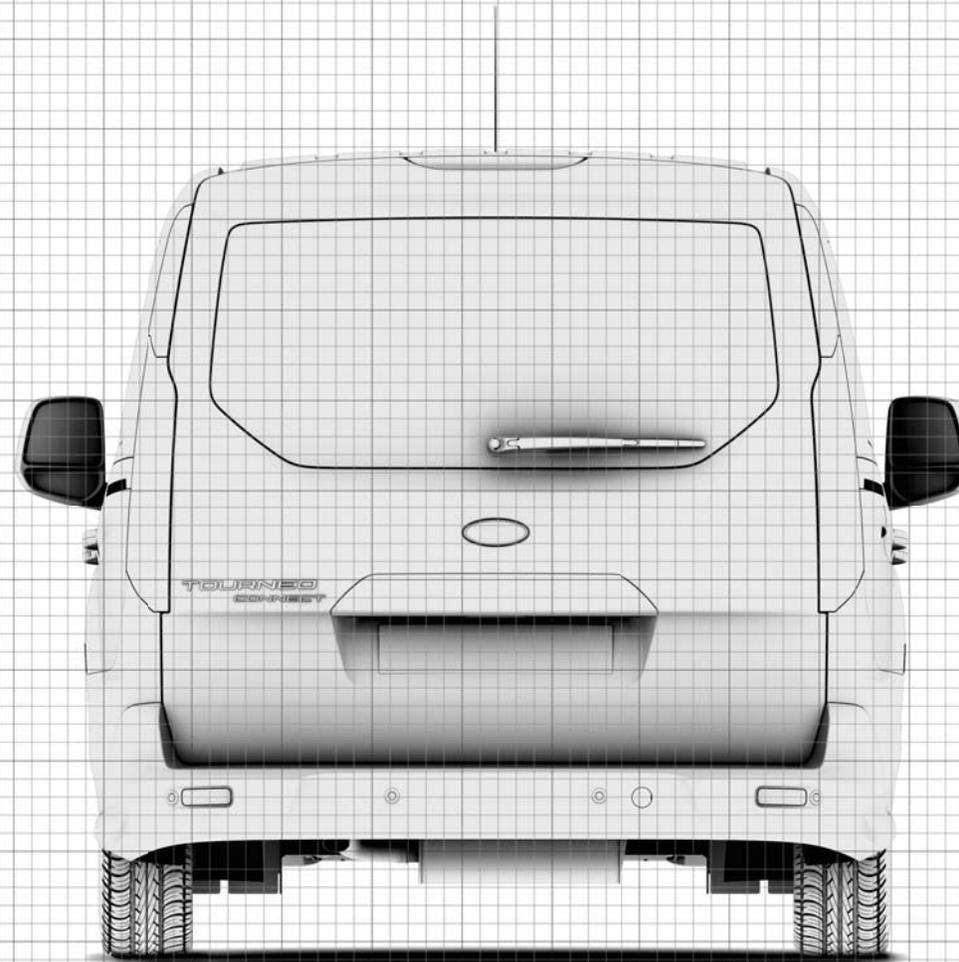

Tourneo Connect Kombi Bus SWB