
 = 200mm


Transit Connect Kombi Van LWB

burrows[®]

3_V408_M_L_32503

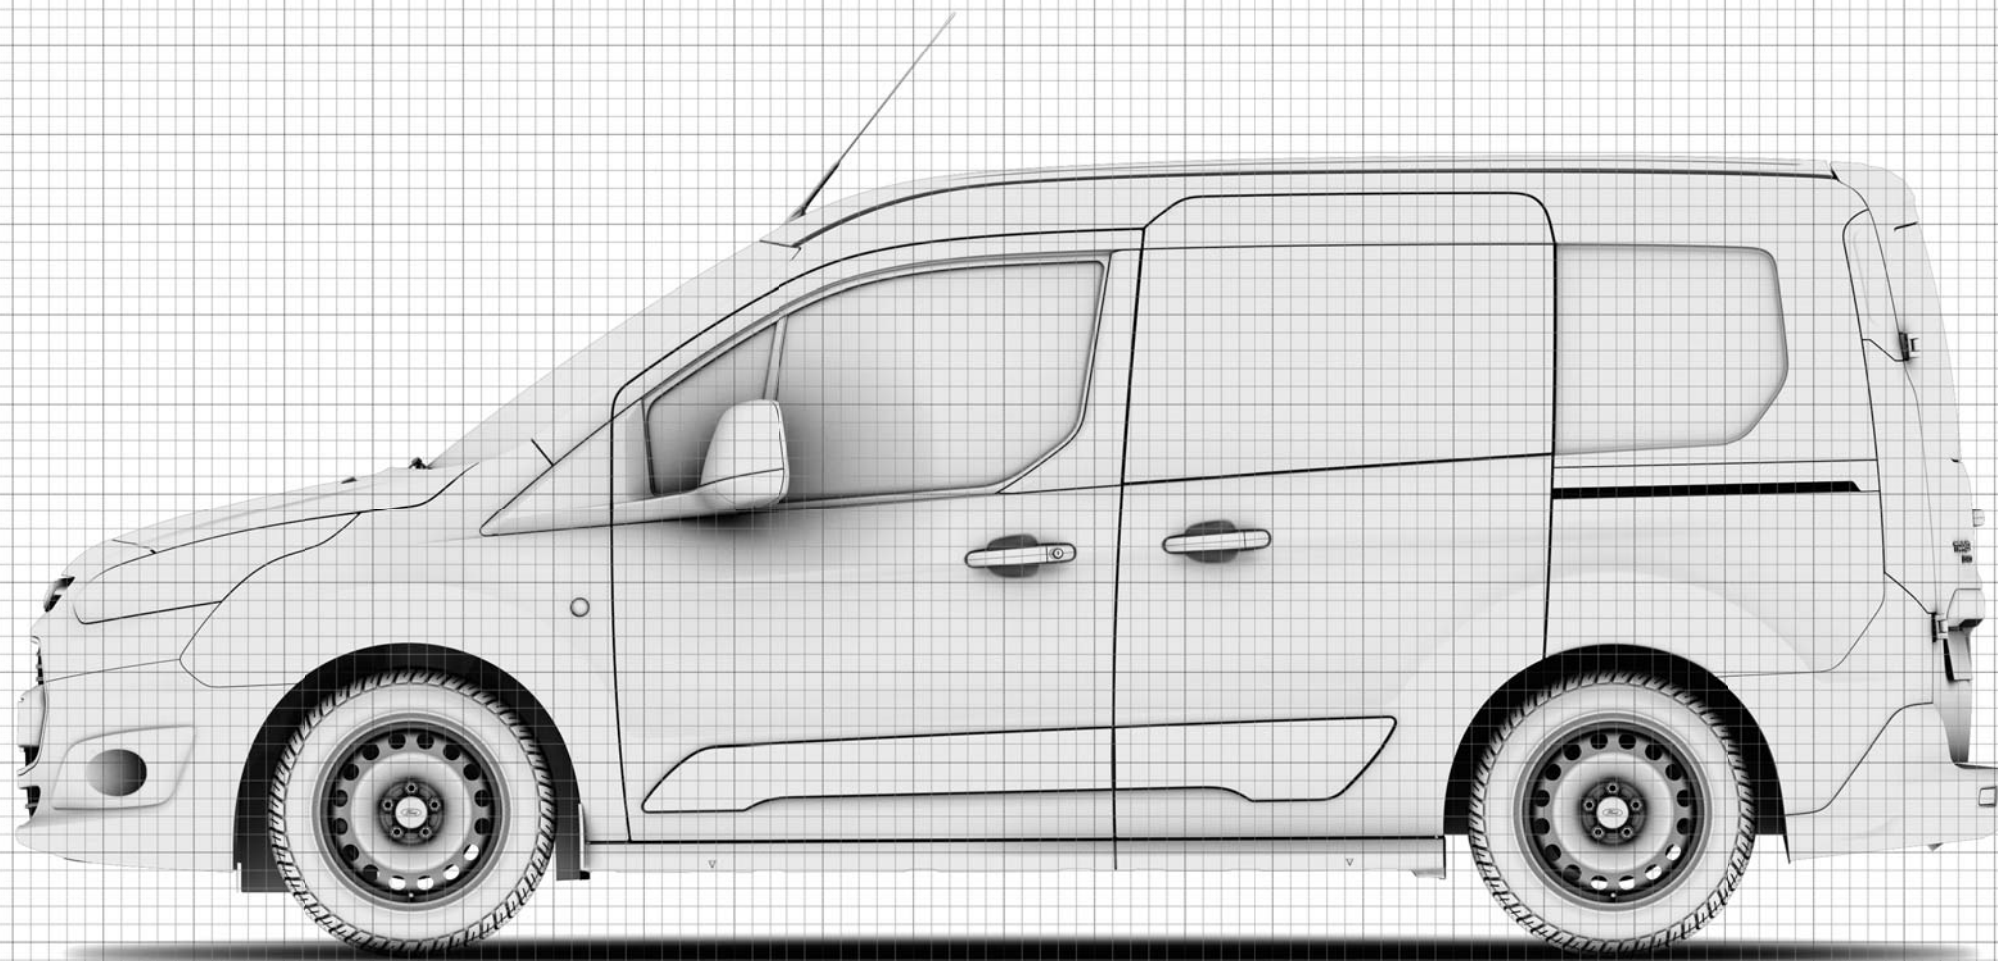




 = 200mm


Transit Connect Kombi Van SWB

burrows[®]

3_V408_M_L_32508



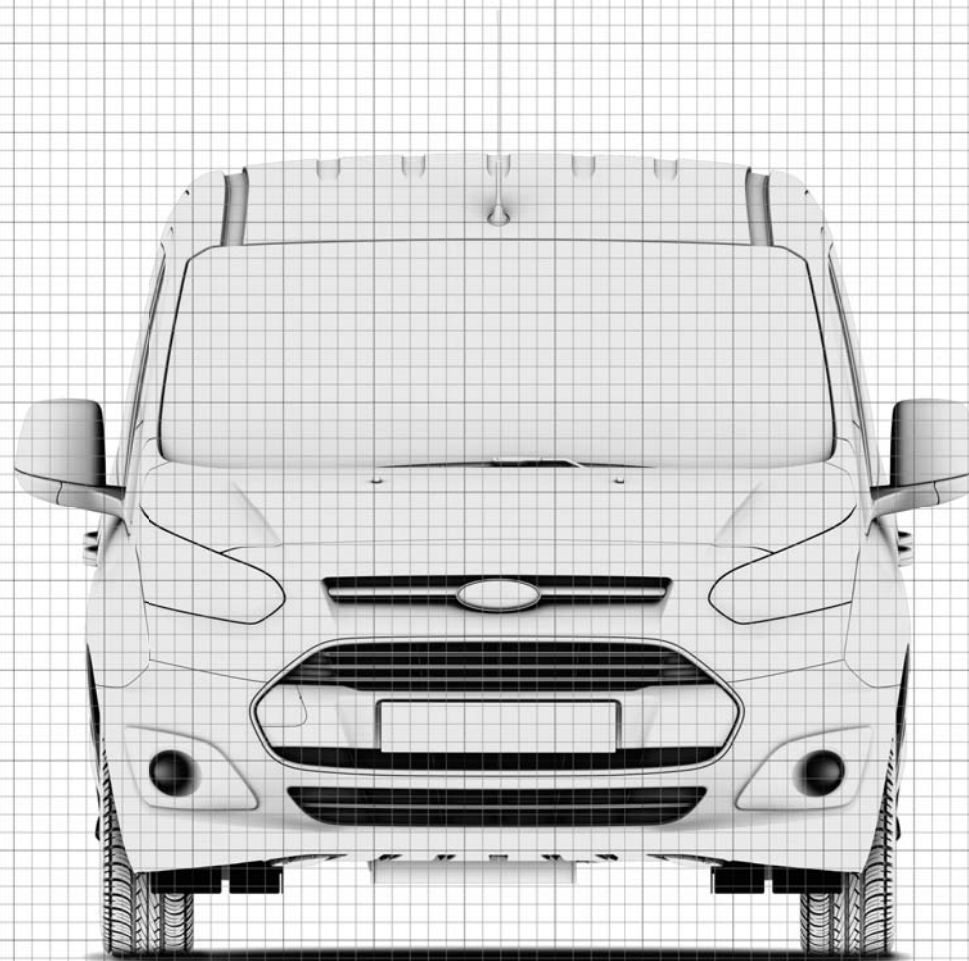


 = 200mm


Transit Connect Kombi Van LWB

burrows[®]


3_V408_M_L_32504




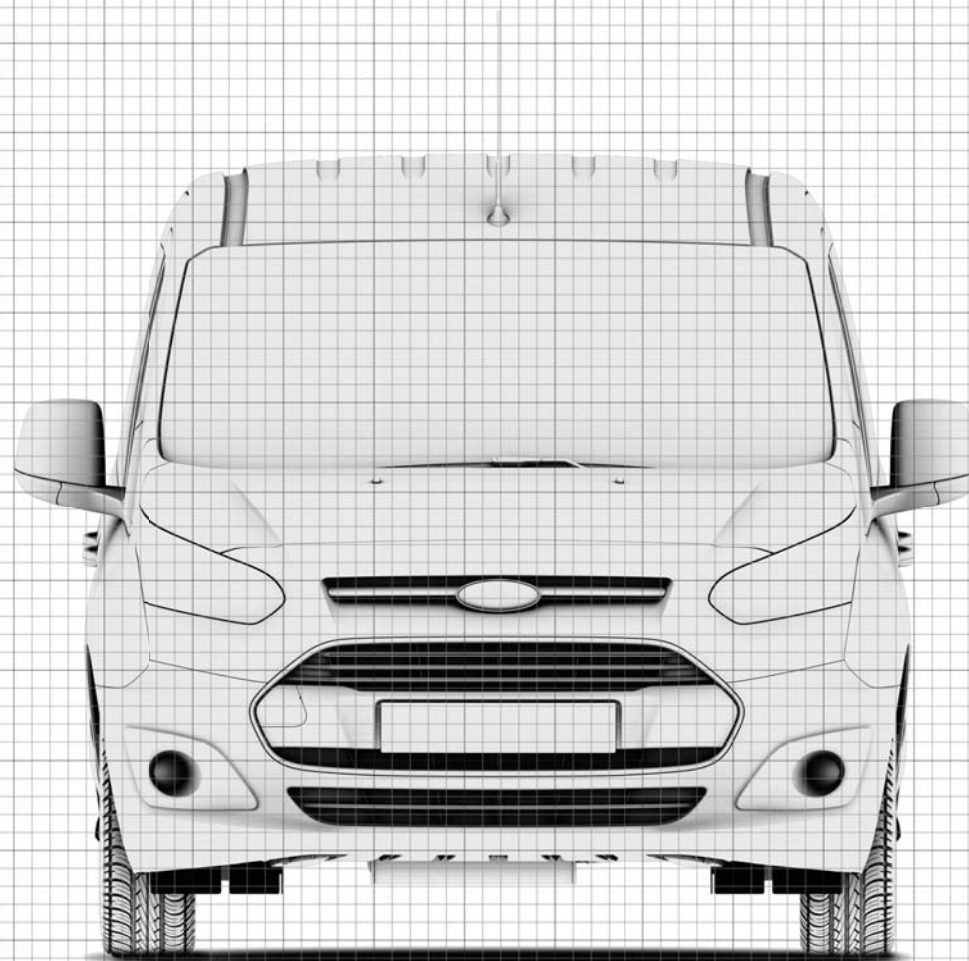

 = 200mm


Transit Connect Kombi Van SWB

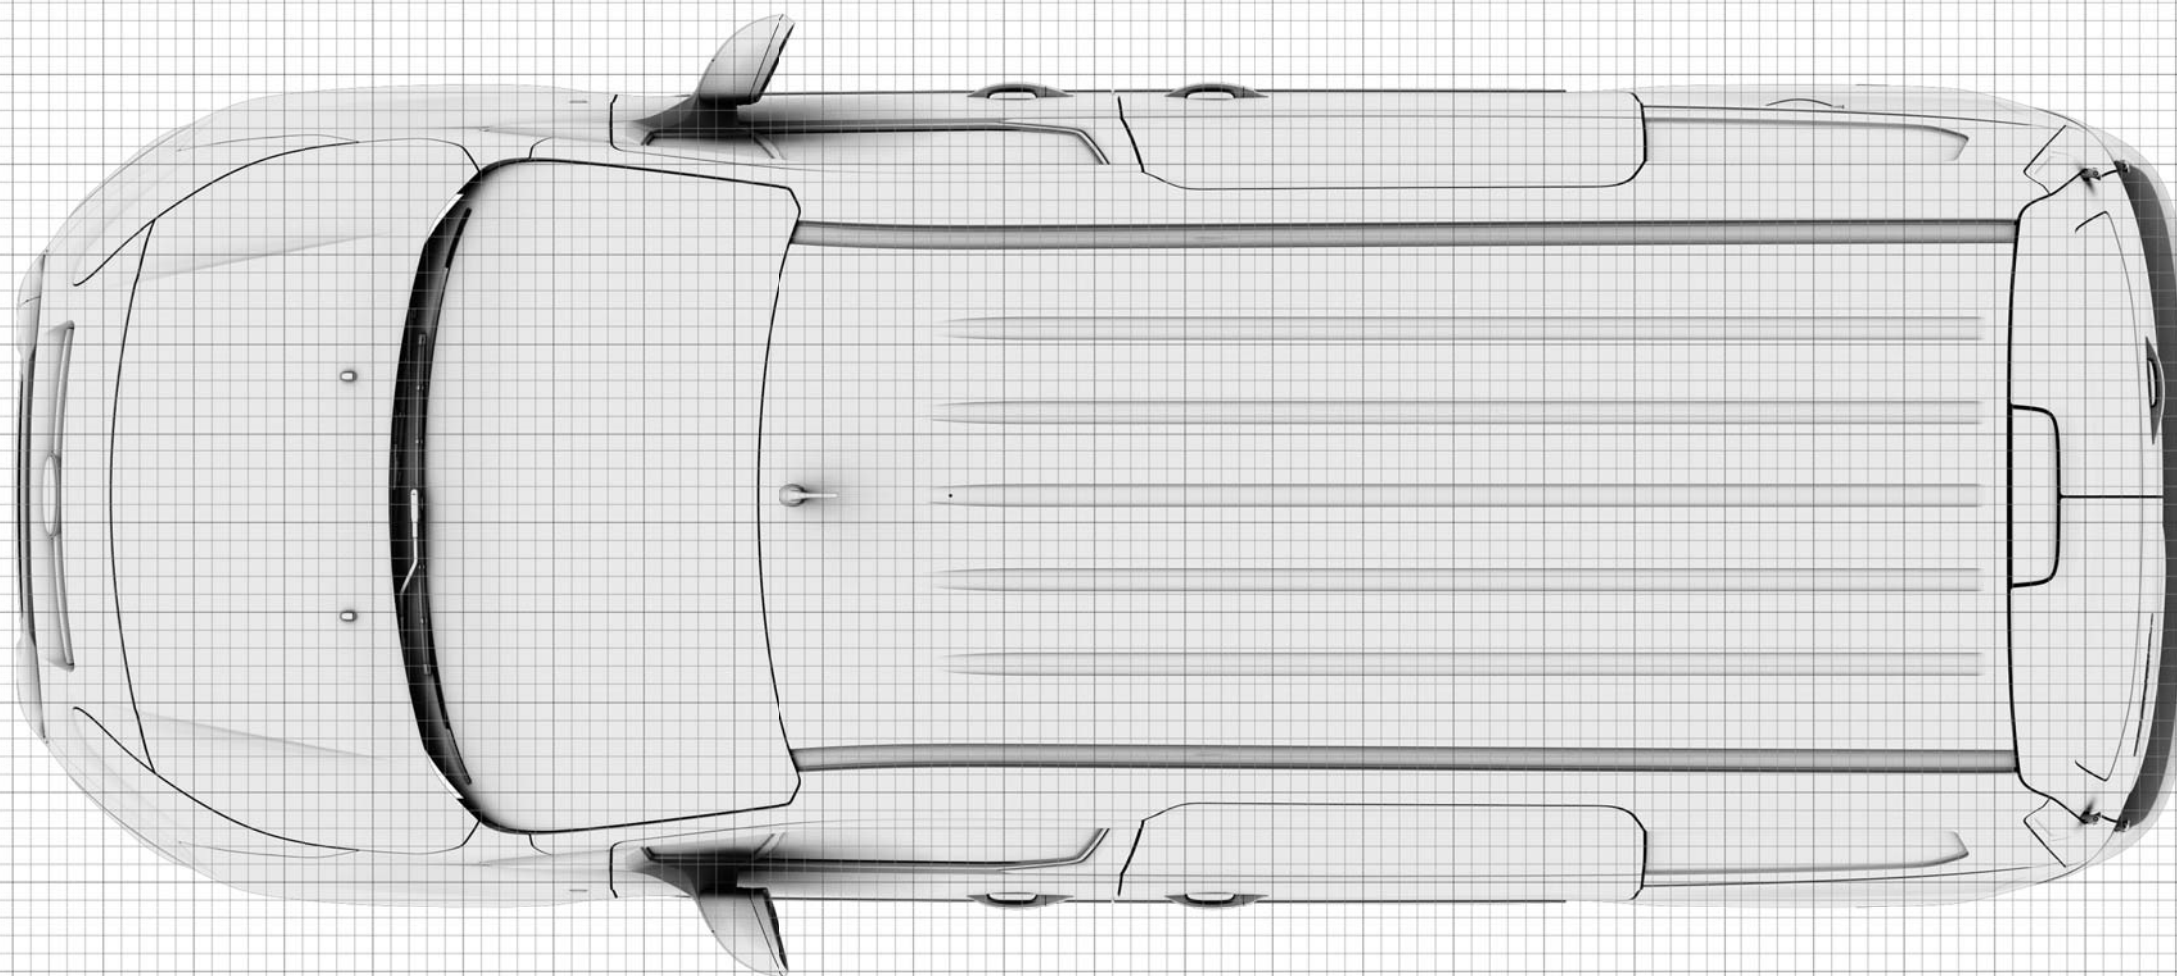


 = 200mm

Transit Connect Kombi Van LWB

3_V408_M_L_32500

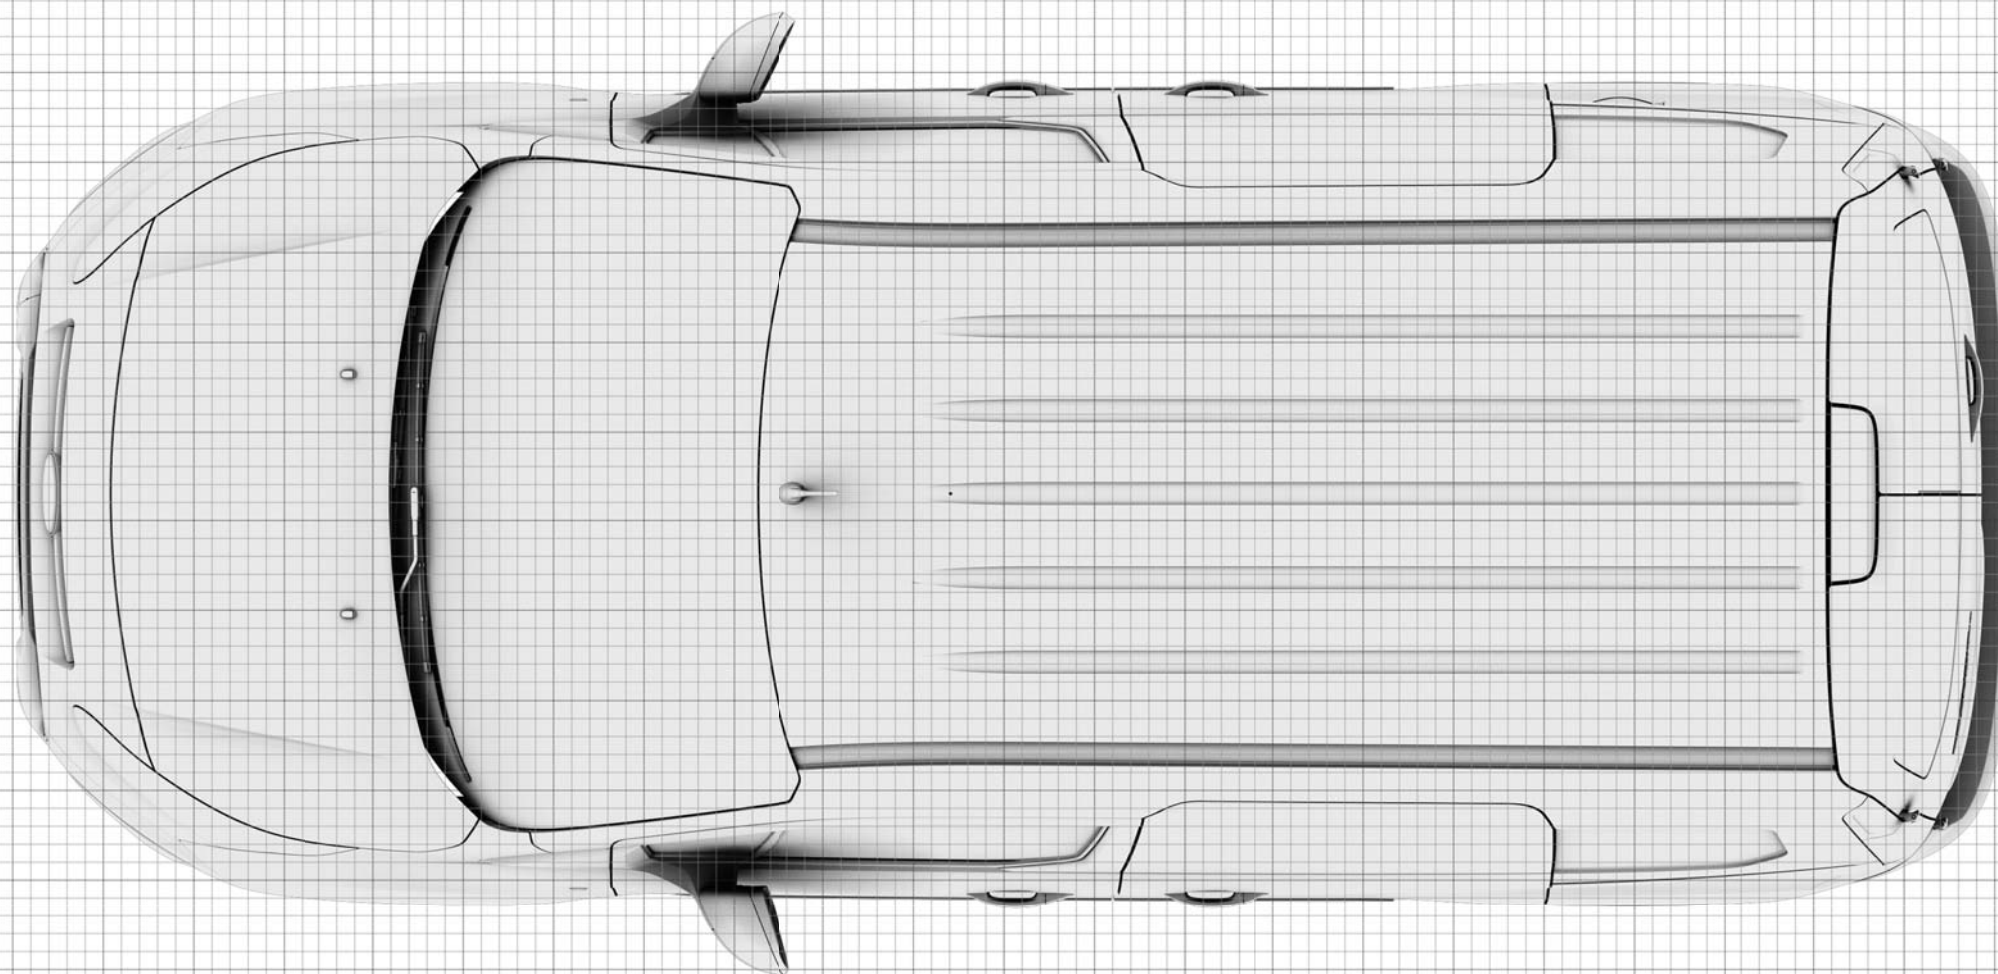


 = 200mm


Transit Connect Kombi Van SWB

burrows[®]


3_V408_M_L_32505




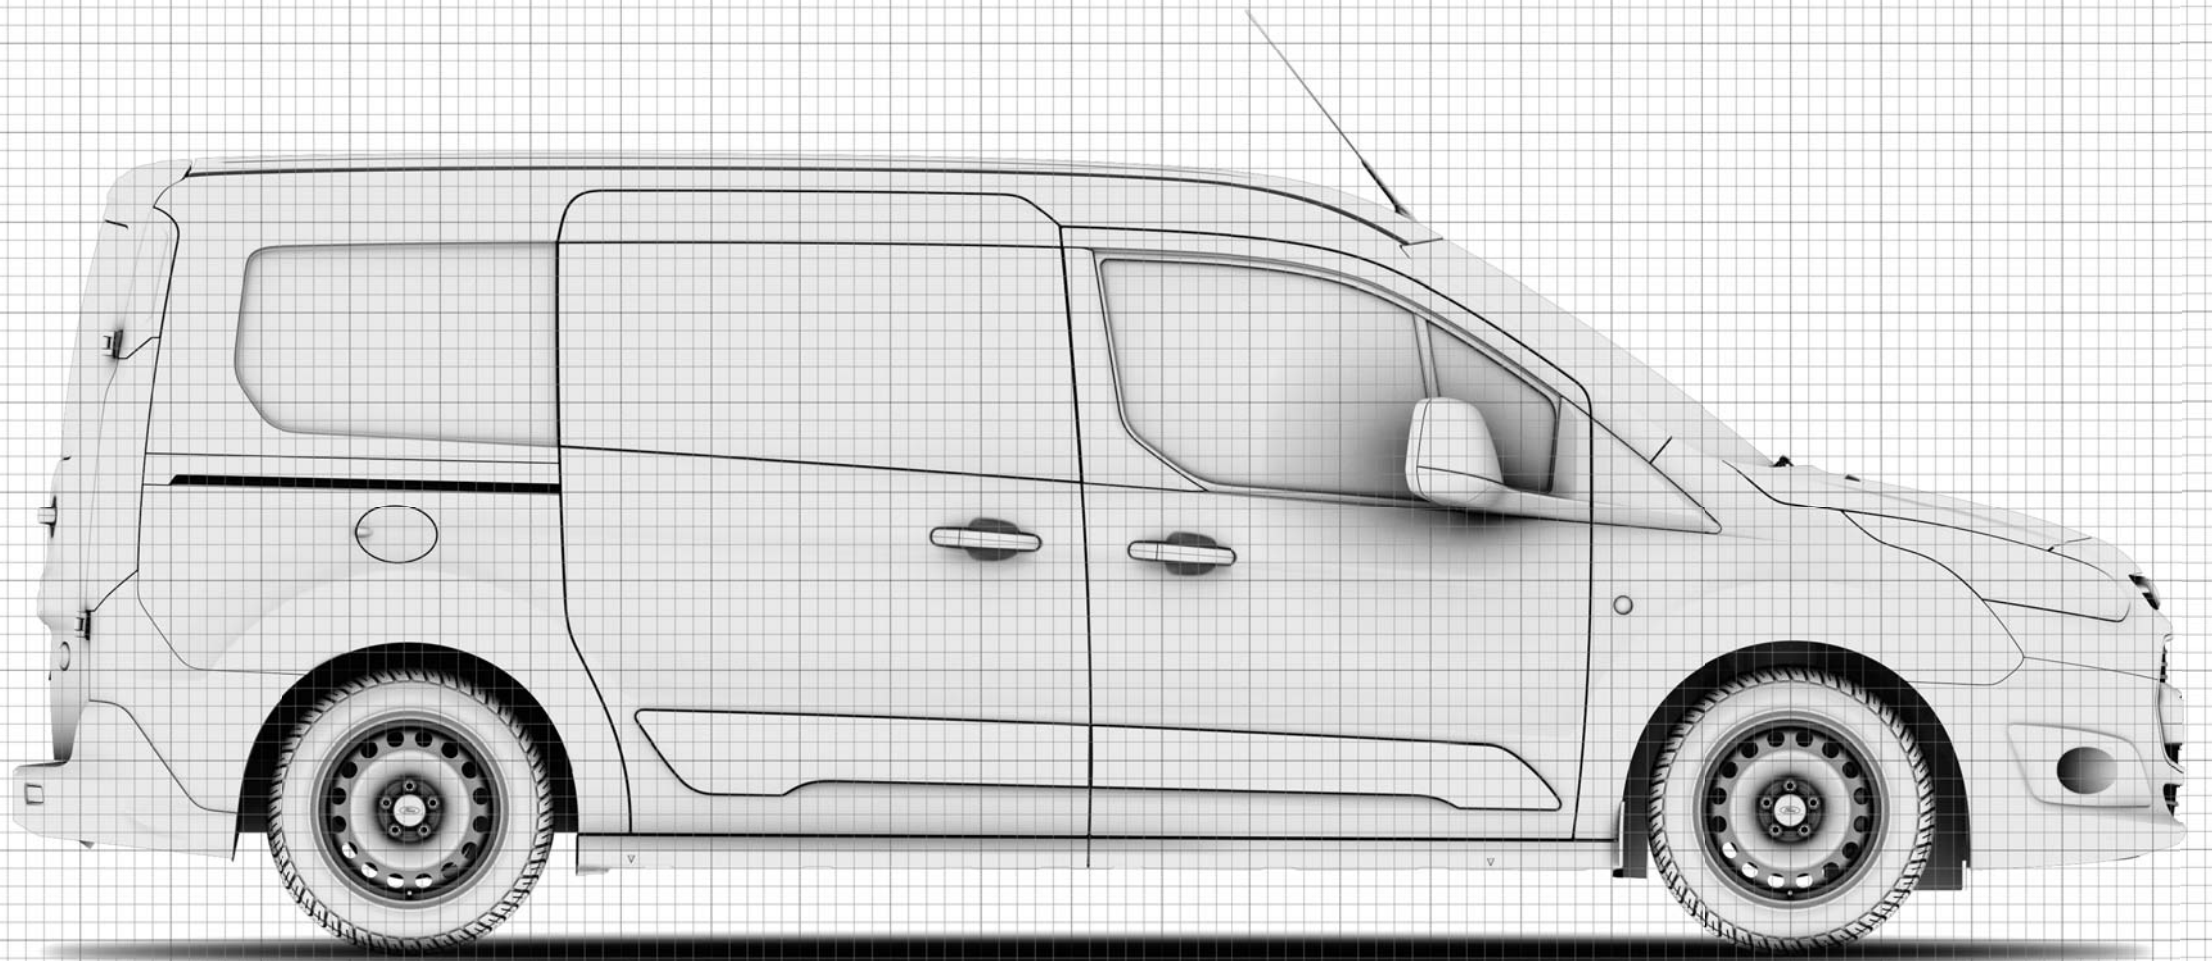



 = 200mm

Transit Connect Kombi Van LWB

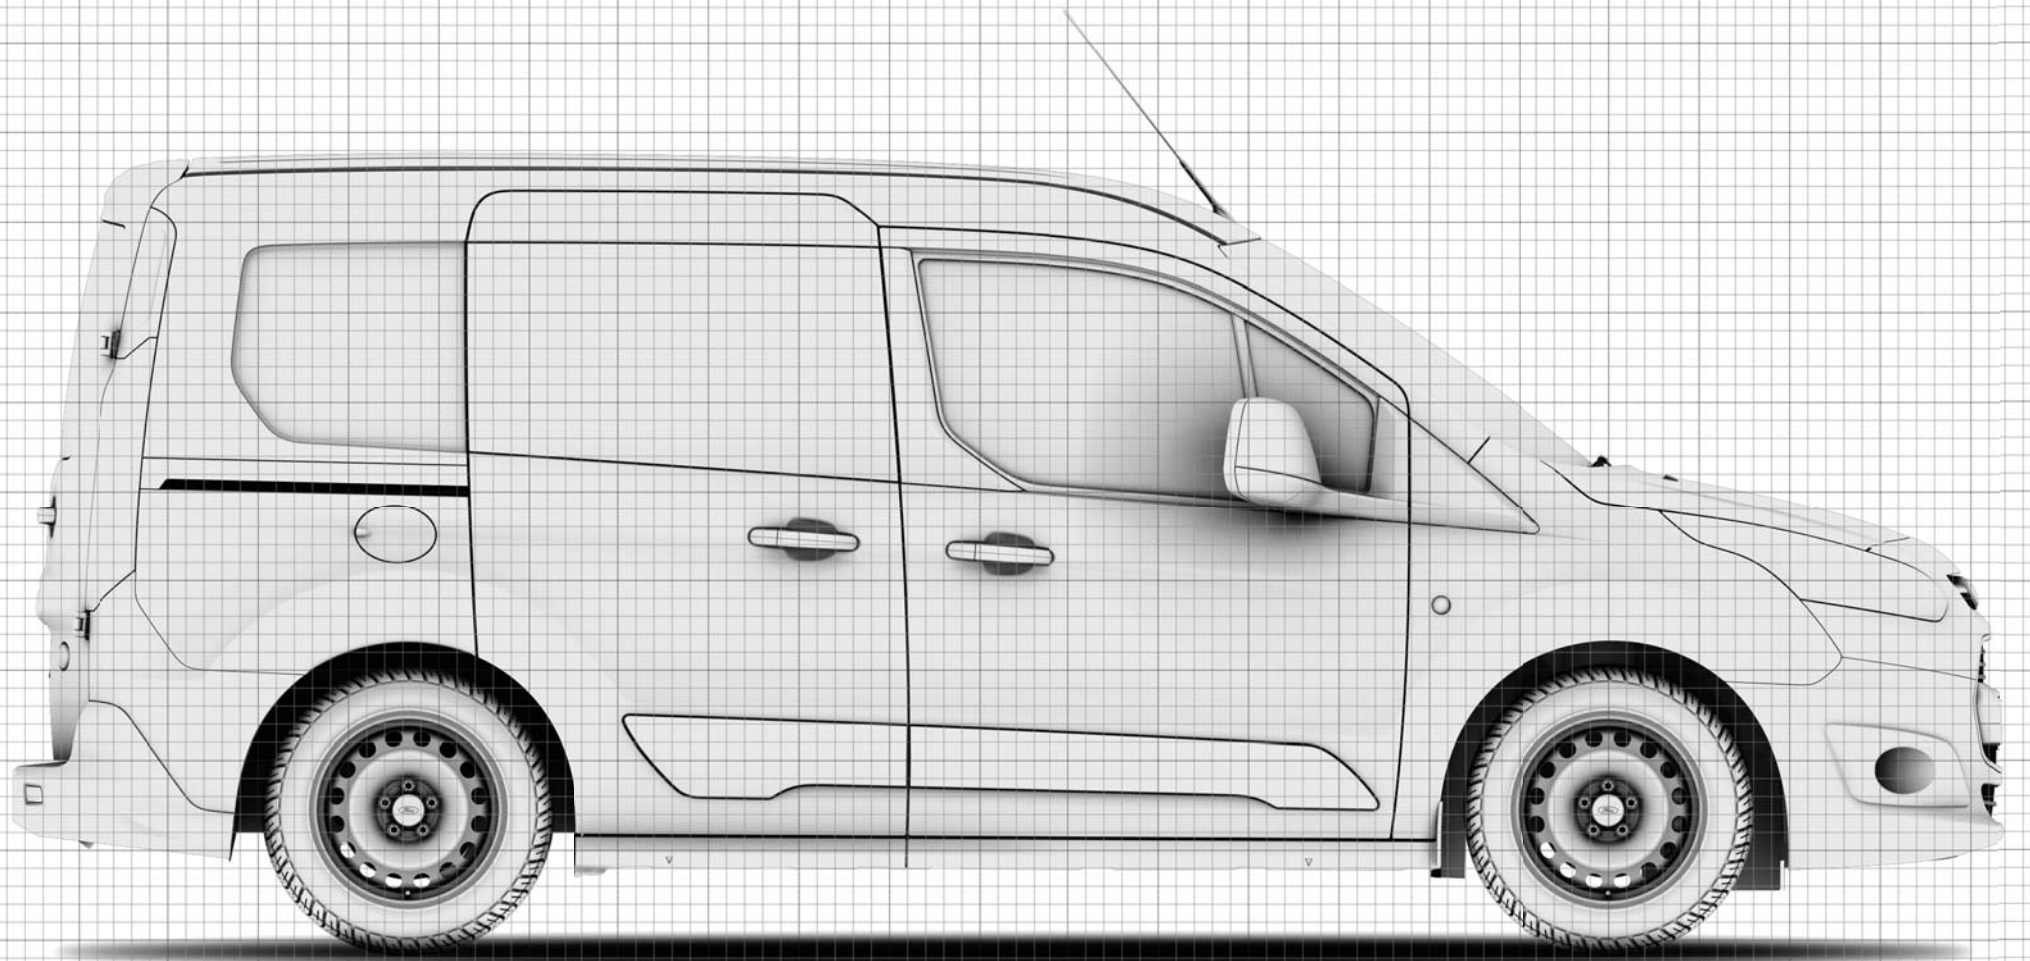

 = 200mm

Transit Connect Kombi Van SWB


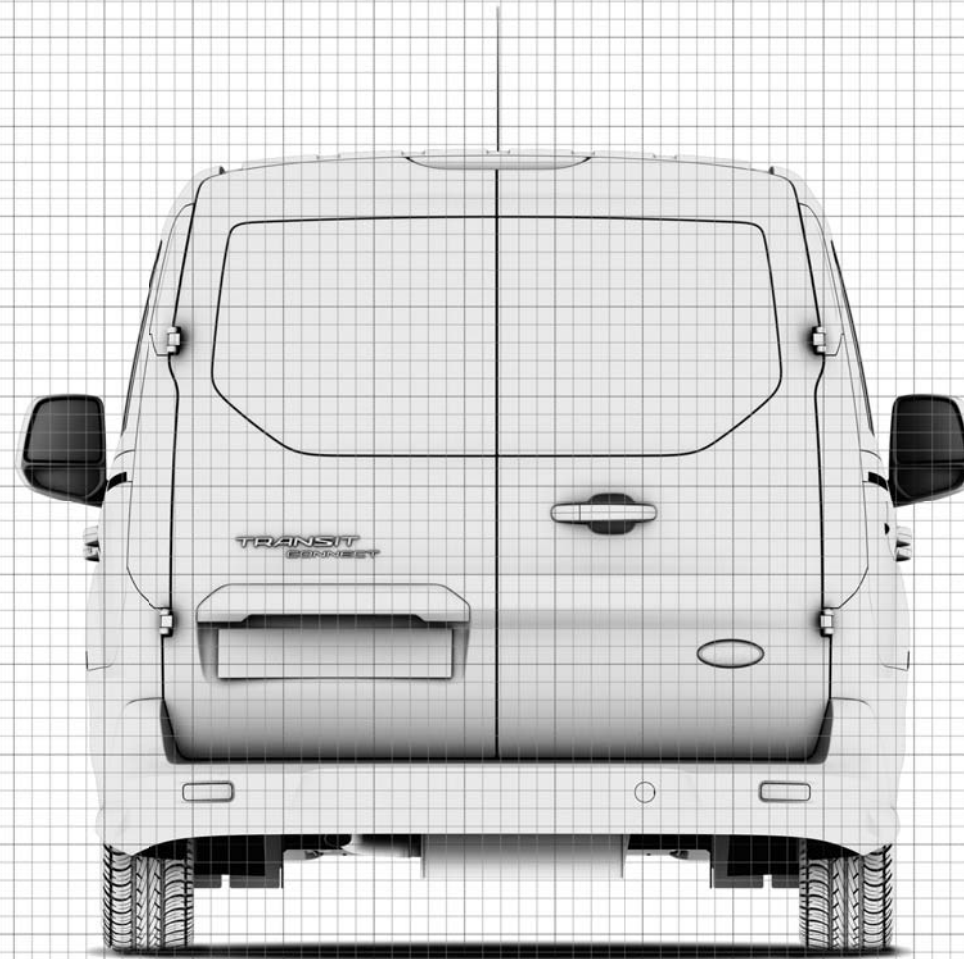


Transit Connect Kombi Van LWB

burrows[®]

3_V408_M_L_32501



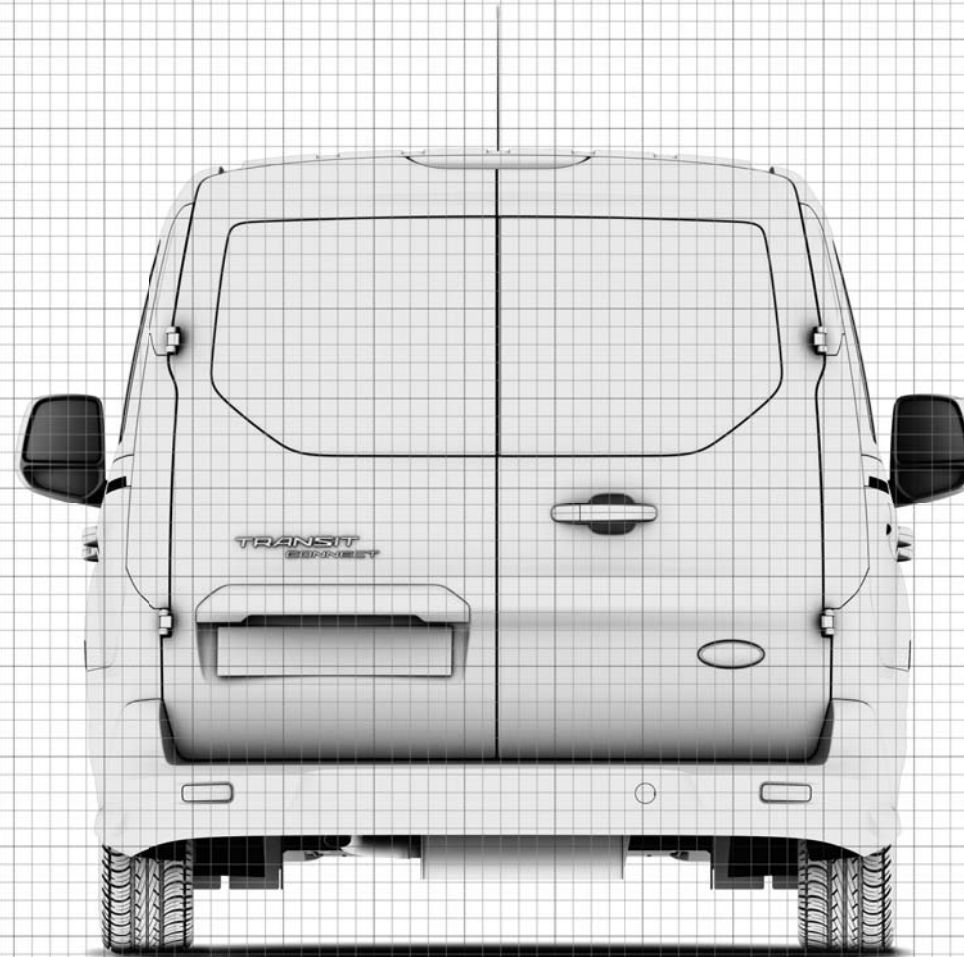

Transit Connect Kombi Van SWB