

 = 200mm

Transit Connect LWB

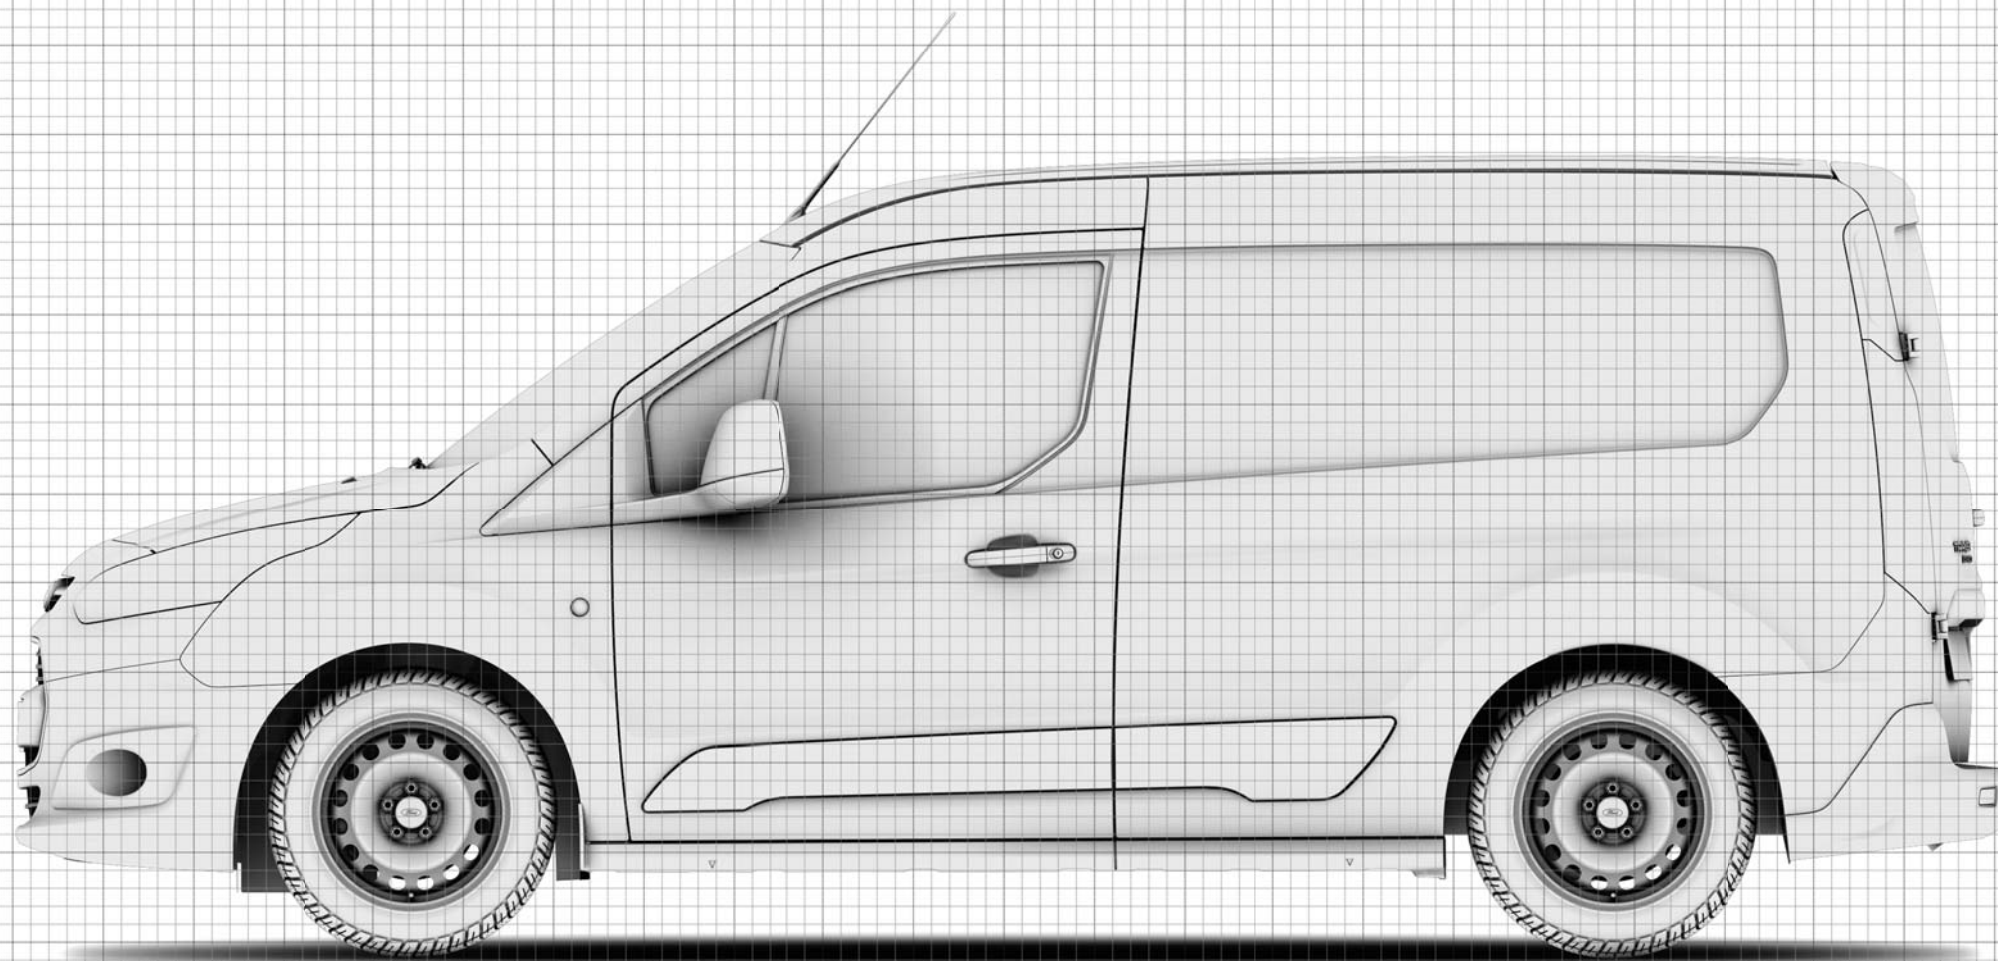



 = 200mm

Transit Connect SWB



burrows[®]

3_V408_M_L_32454





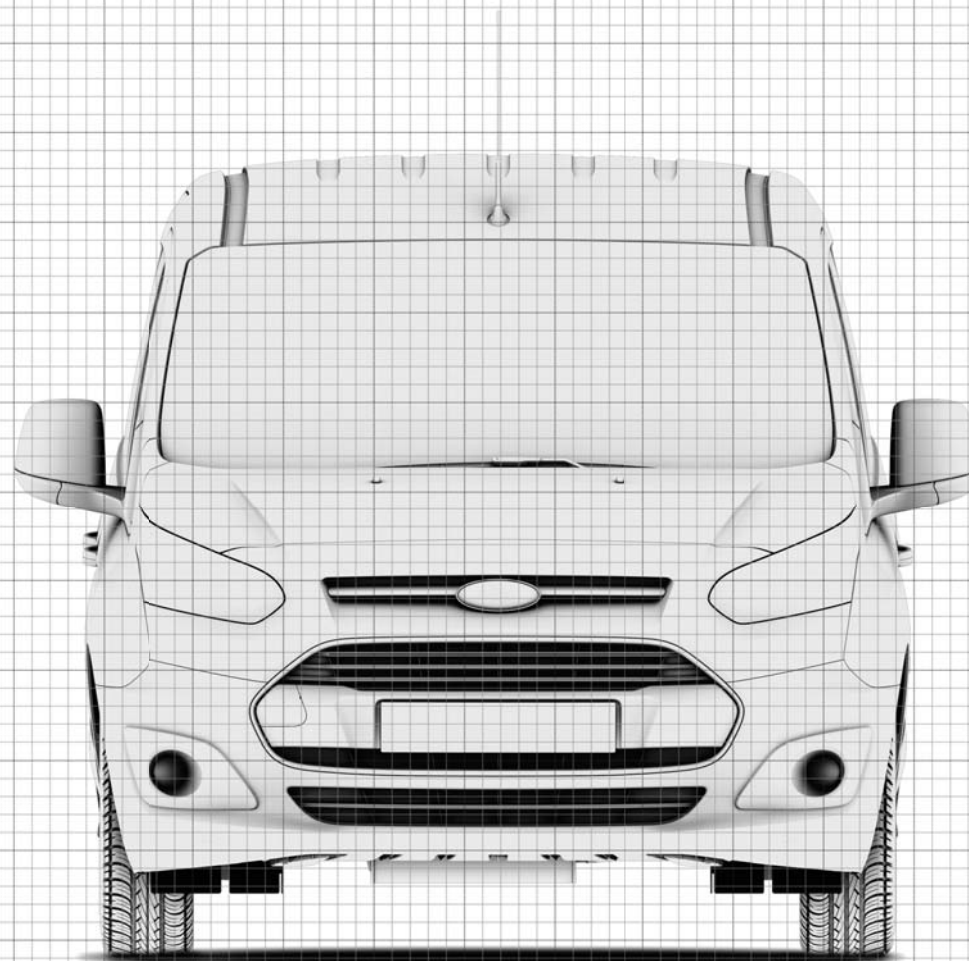

Transit Connect LWB

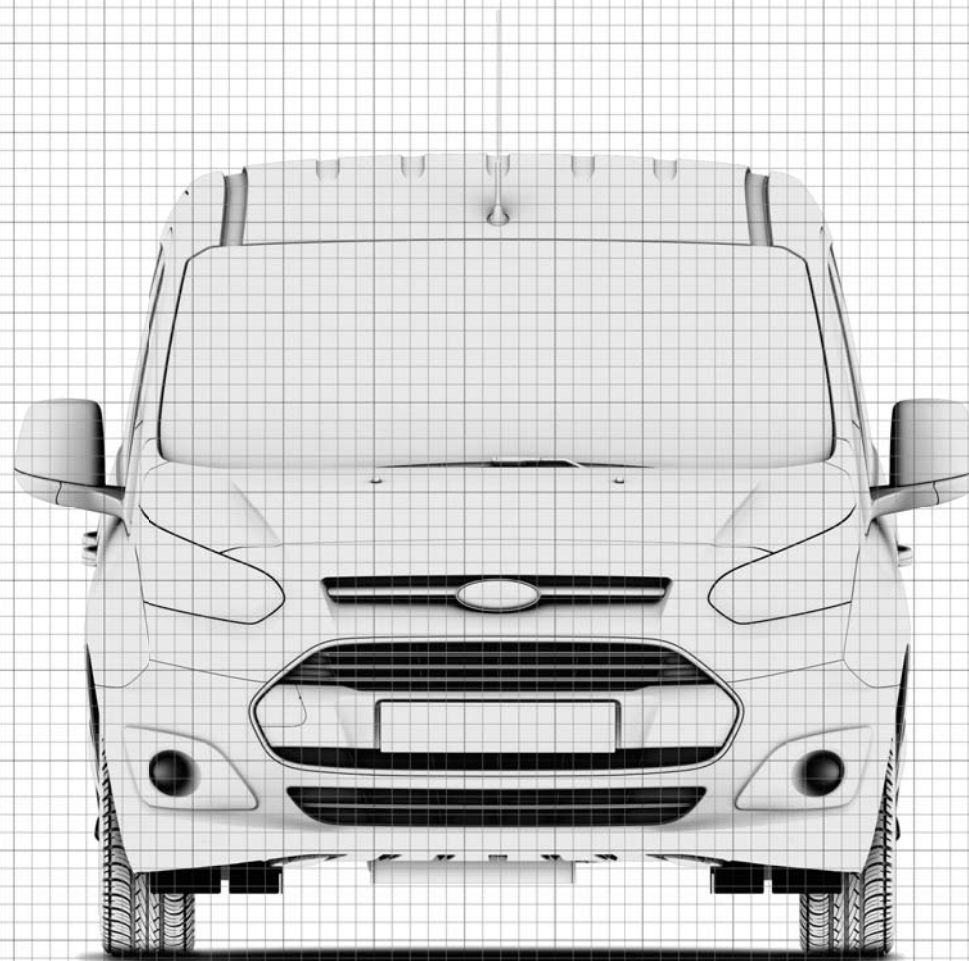

Transit Connect SWB

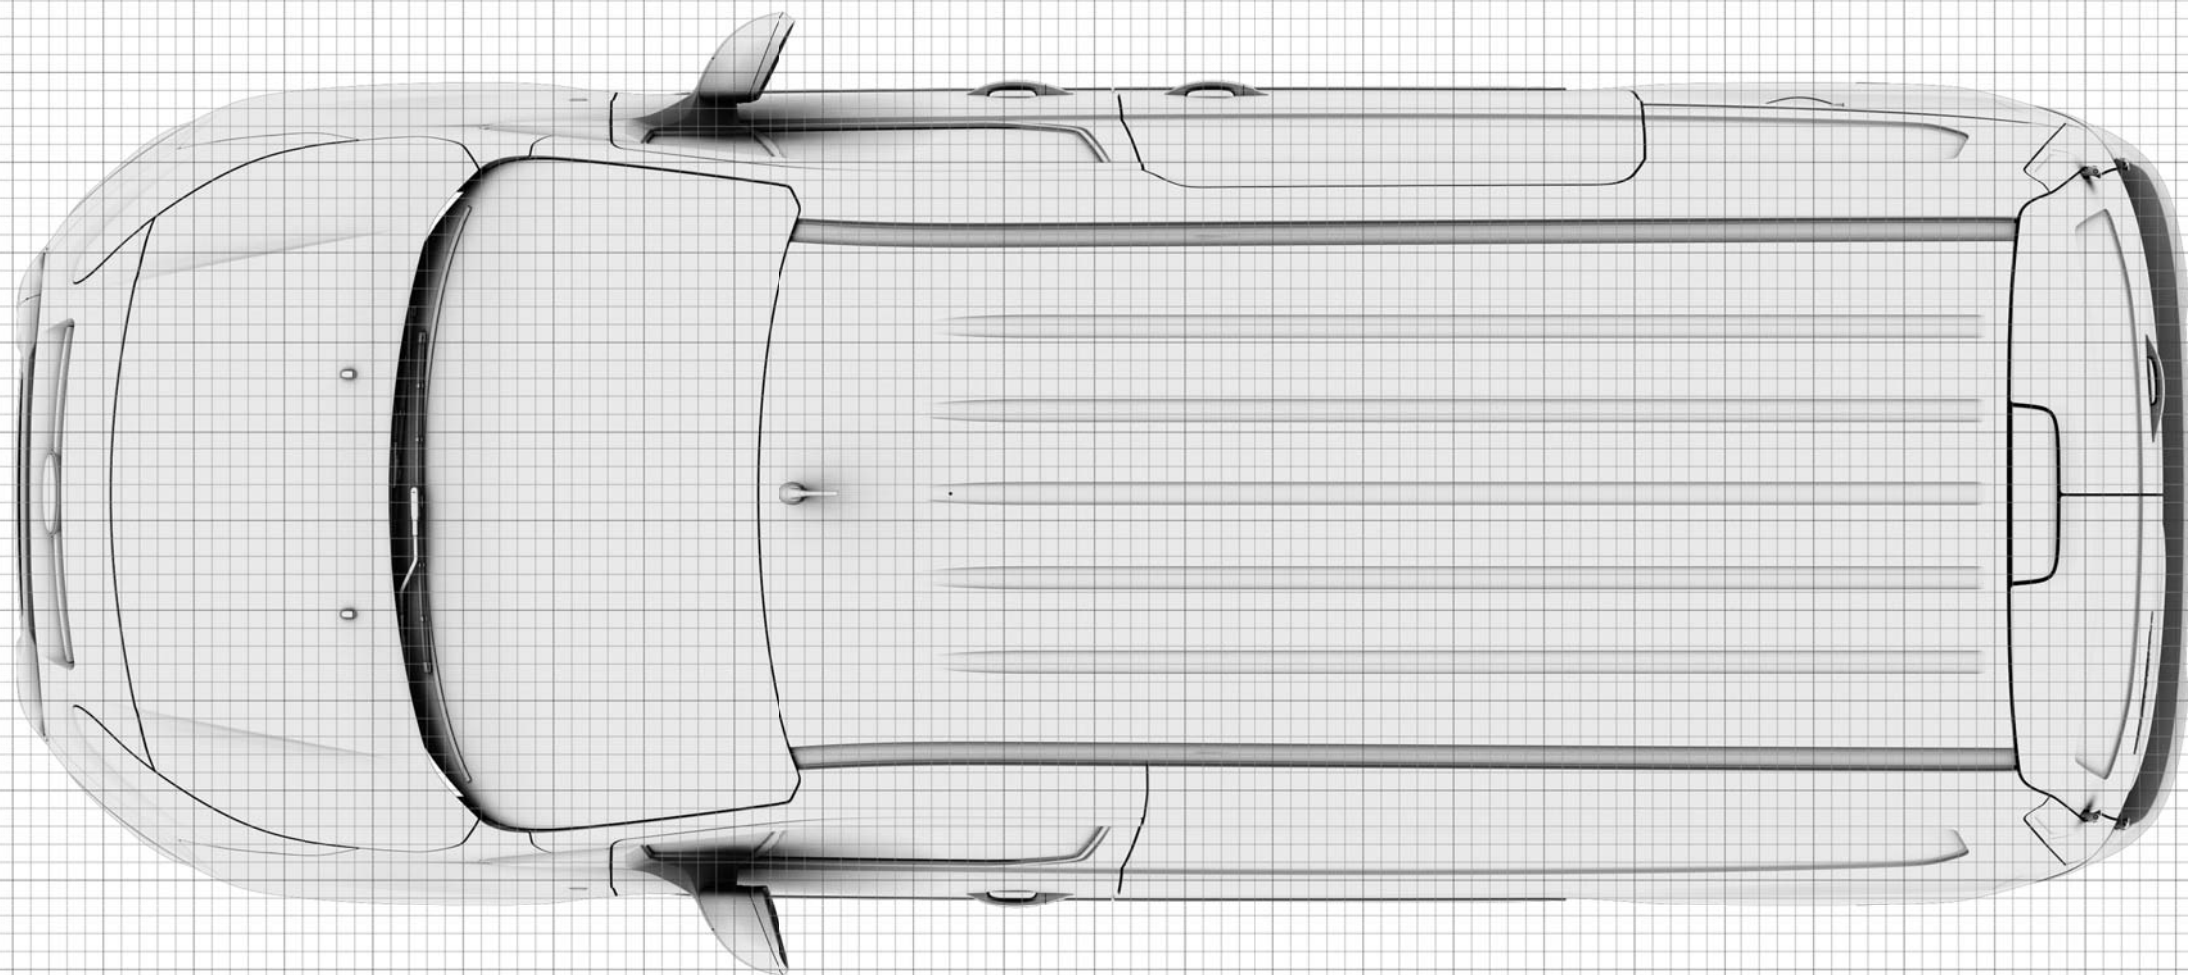



Transit Connect LWB

burrows[®]

3_V408_M_L_32459



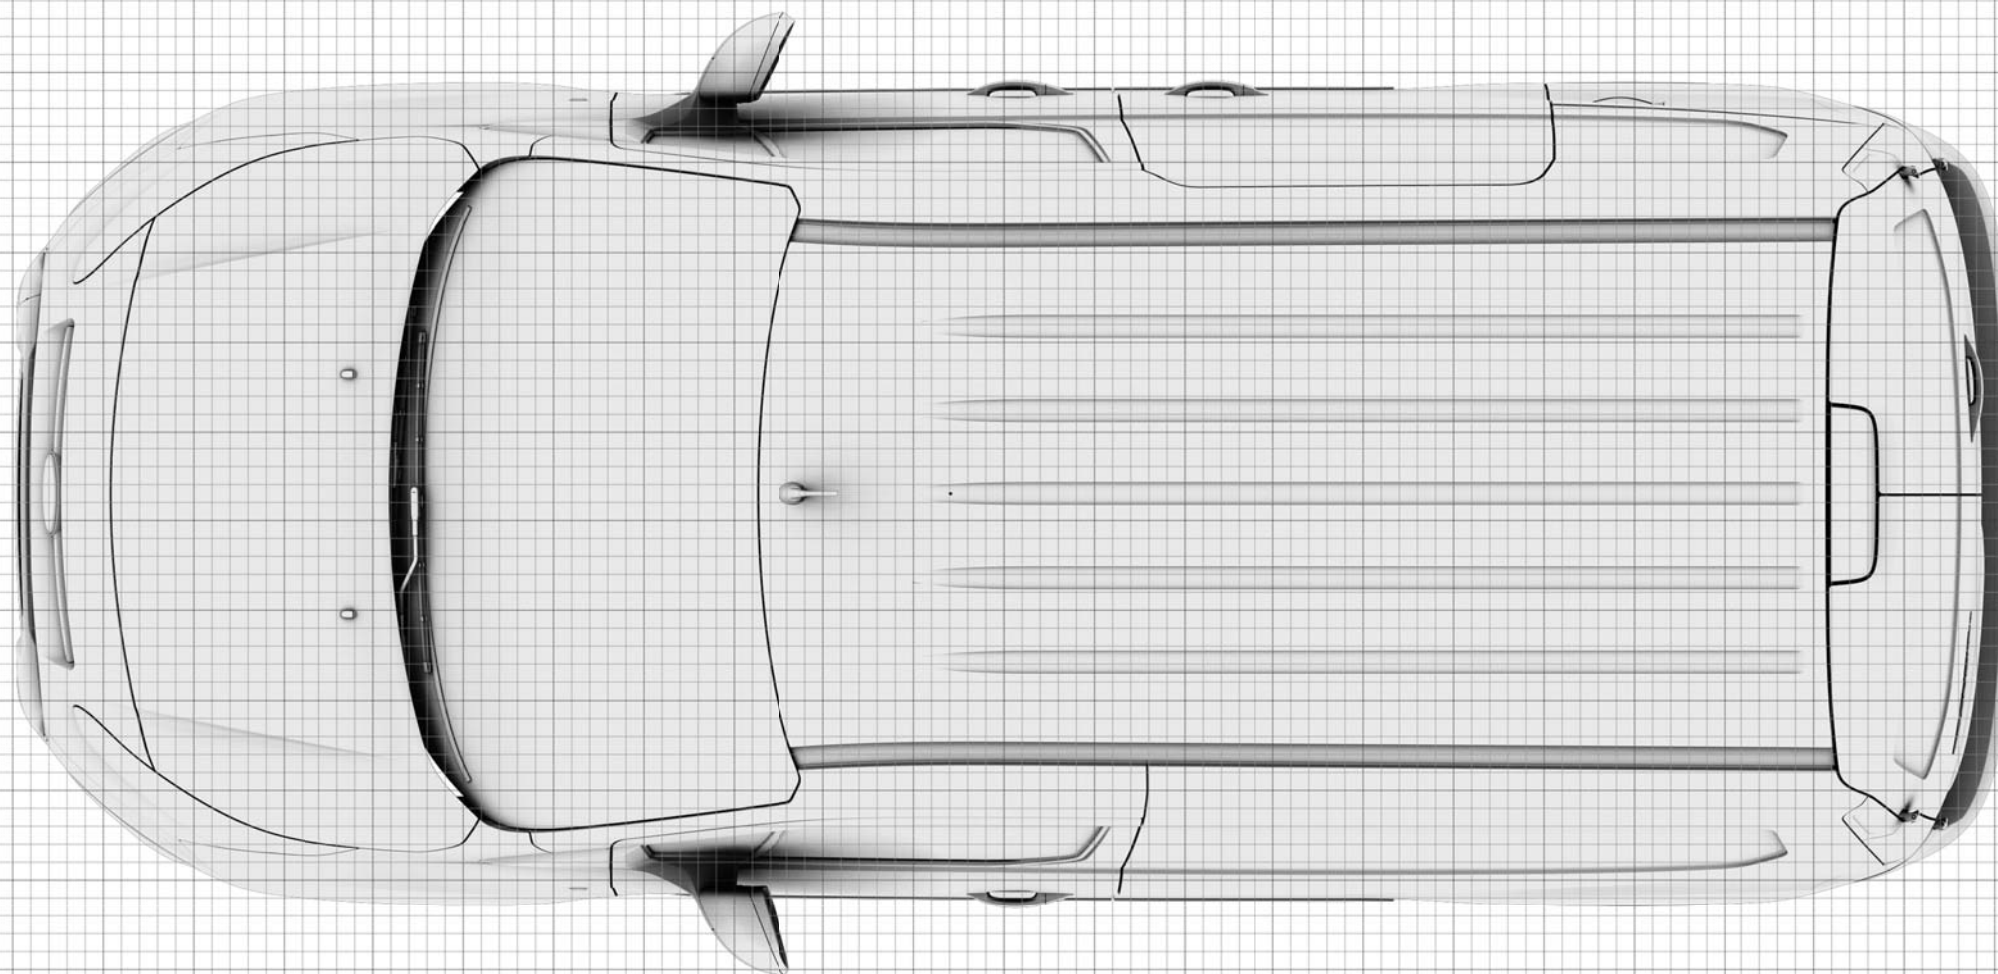


 = 200mm


Transit Connect SWB

burrows[®]

3_V408_M_L_32457



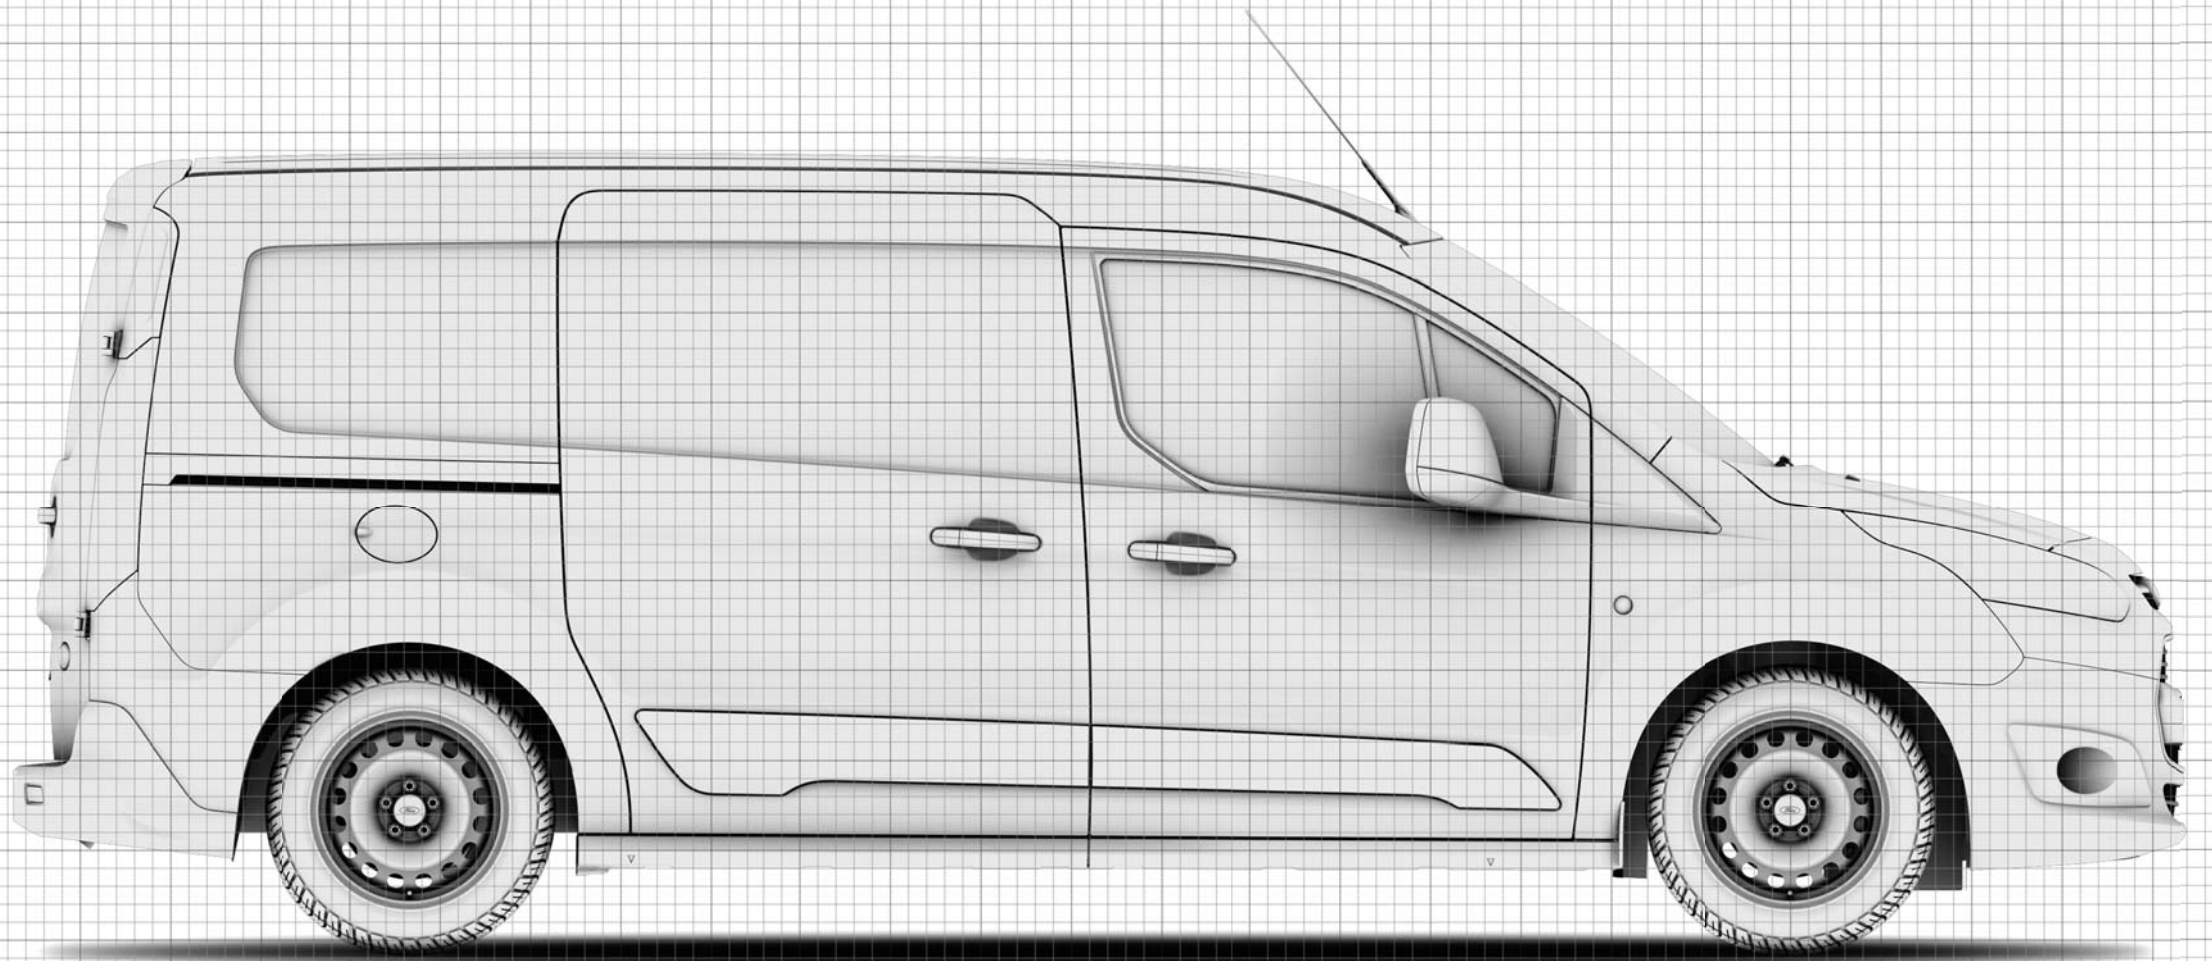


 = 200mm


Transit Connect LWB

burrows[®]

3_V408_M_L_32461



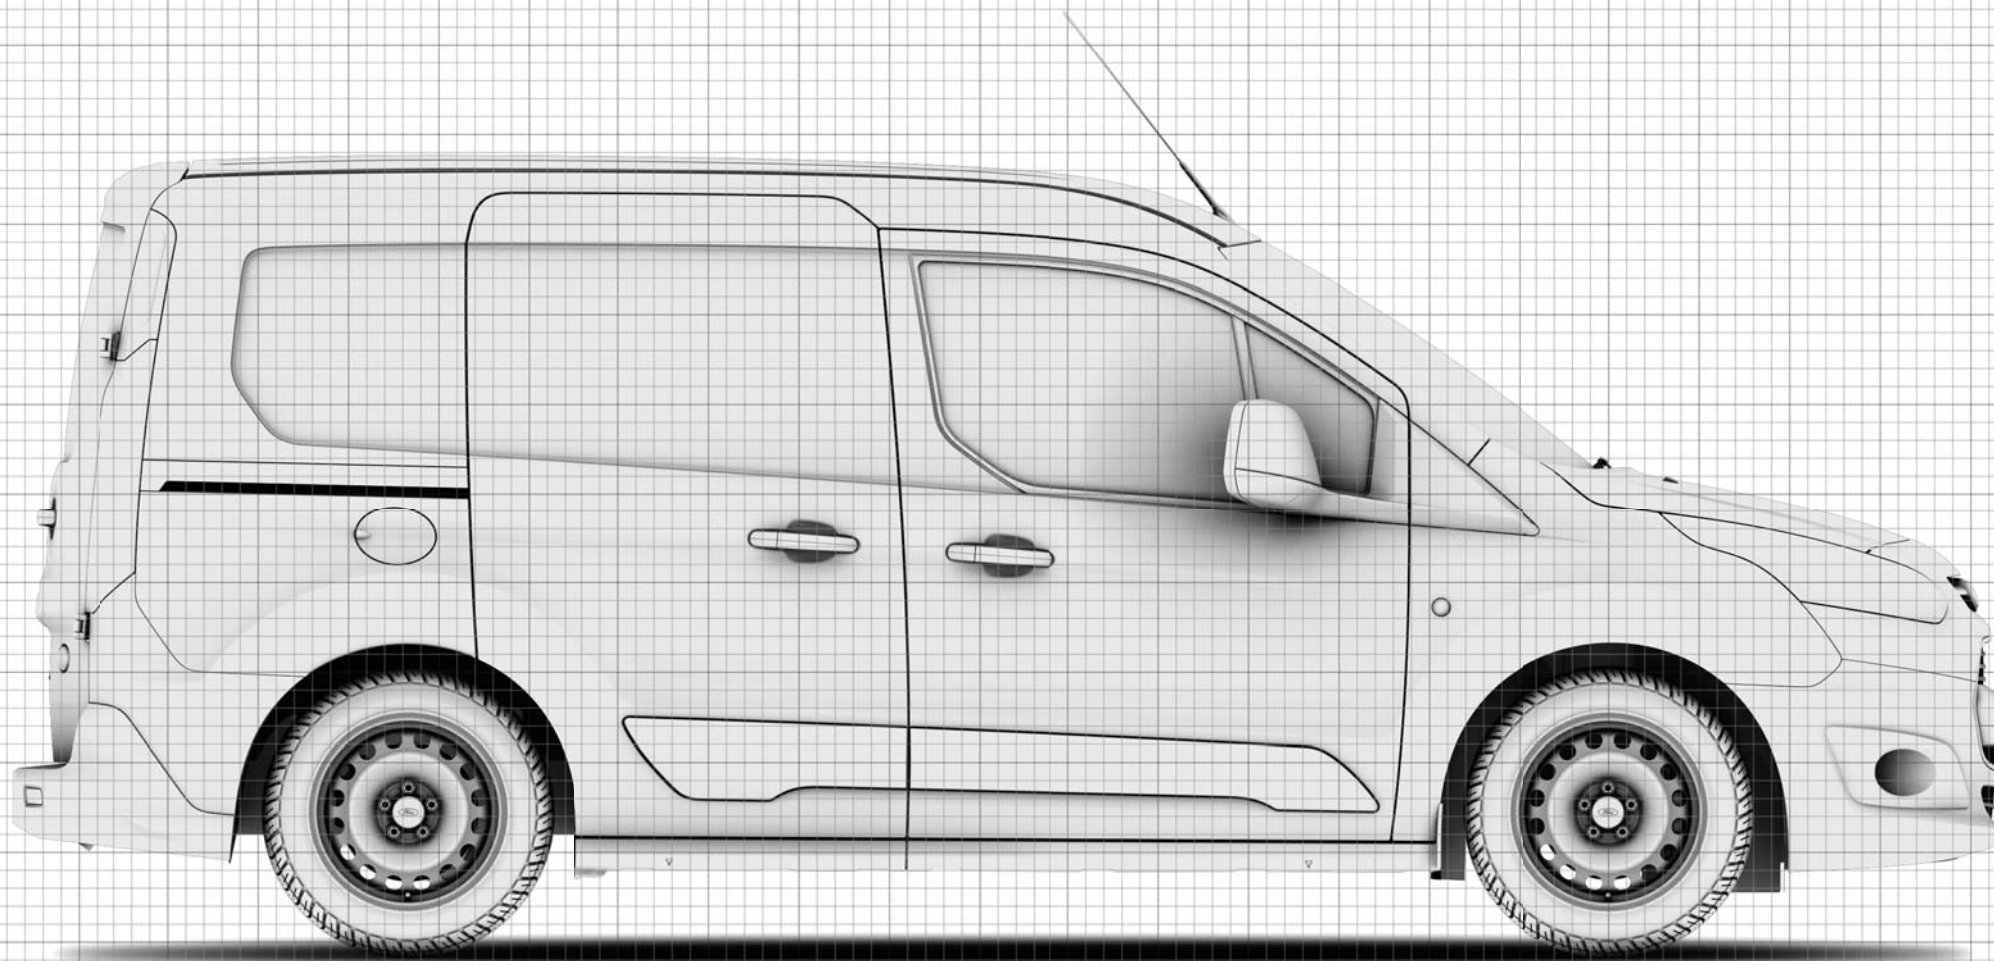



 = 200mm

Transit Connect SWB

burrows[®]

3_V408_M_L_32455




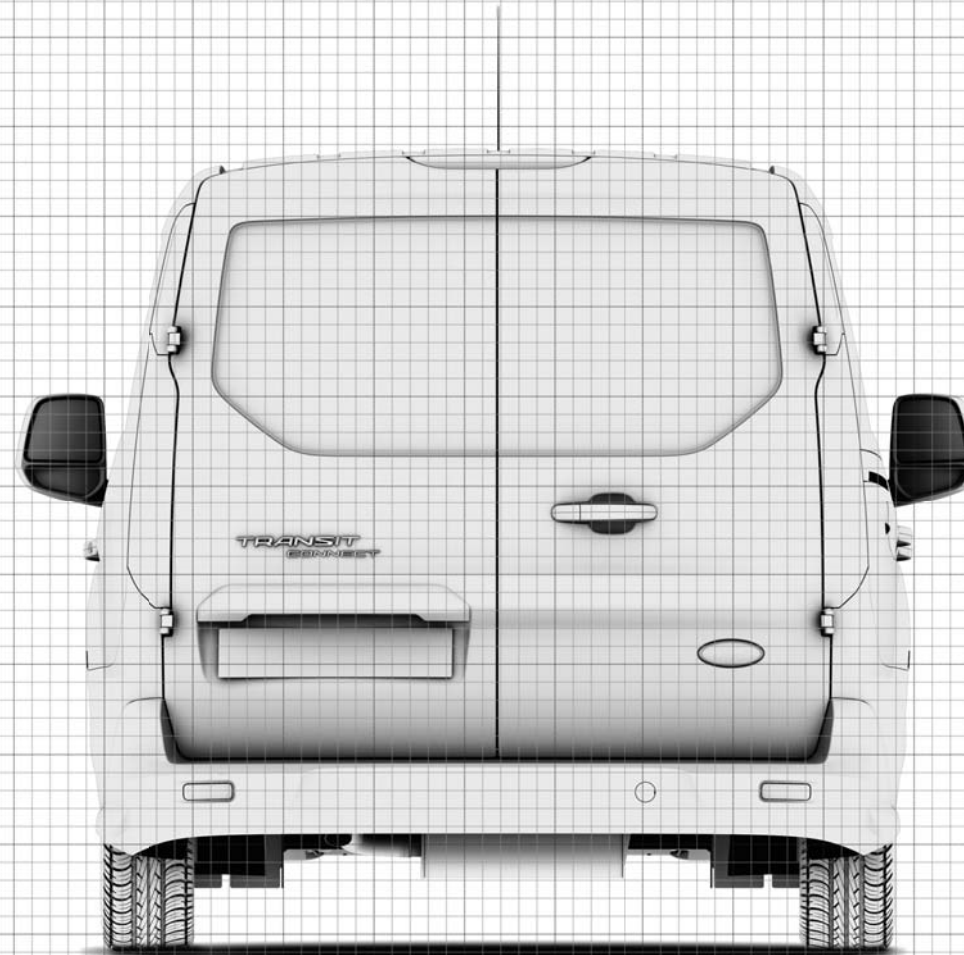


Transit Connect LWB

burrows[®]

3_V408_M_L_32460



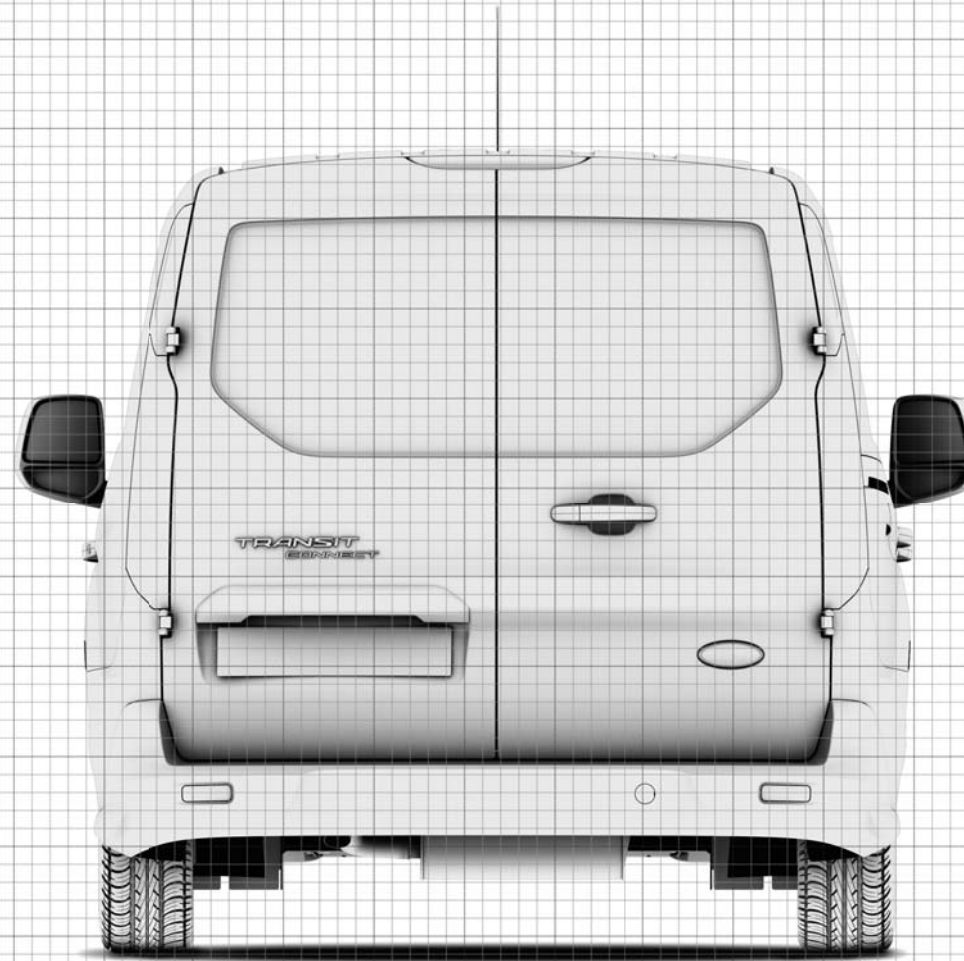

Transit Connect SWB